



# **PHASE 5 COIN USER'S MANUAL (360X2 AND 540)**

---

---

**American Dryer Corporation**

88 Currant Road

Fall River, MA 02720-4781

Telephone: (508) 678-9000 / Fax: (508) 678-9447

e-mail: [techsupport@amdry.com](mailto:techsupport@amdry.com)

[www.amdry.com](http://www.amdry.com)

# **Retain This Manual In A Safe Place**

## **For Future Reference**

Please read this manual carefully to thoroughly familiarize yourself with the Phase 5 Coin computer system features, operational instructions, and programming characteristics. This manual contains important information on how to employ ALL the features of your new **ADC** dryer in the safest and most economical way.

**American Dryer Corporation** products embody advanced concepts in engineering, design, and safety. If this product is properly maintained, it will provide many years of safe, efficient, and trouble free operation.

We have tried to make this manual as complete as possible and hope you will find it useful. **ADC** reserves the right to make changes from time to time, without notice or obligation, in prices, specifications, colors, and material, and to change or discontinue models.

### **“IMPORTANT NOTE TO PURCHASER”**

Information must be obtained from your local gas supplier on the instructions to be followed if the user smells gas. These instructions must be posted in a prominent location near the dryer.

# ***Table Of Contents***

## **SECTION I**

<b>INTRODUCTION .....</b>	<b>3</b>
Phase 5 Coin Microprocessor Controller (Computer) Features .....	3

## **SECTION II**

<b>L.E.D. DISPLAY AND CODES .....</b>	<b>7</b>
---------------------------------------	----------

## **SECTION III**

<b>OPERATING INSTRUCTIONS .....</b>	<b>9</b>
A. Timed Mode .....	9
B. Automatic Mode (Patent No. 4,827,627) .....	10
C. Free Dry Mode .....	11

## **SECTION IV**

<b>PROGRAM SELECTION .....</b>	<b>12</b>
Temperature Display Mode .....	12
Right Coin Count (rCC)/Left Coin Count (LCC) .....	12
Automatic Review of Program Location (PL) .....	13
PL01 - Temperature Conversion Status .....	14
Automatic Mode (AUtO) Patent No. 4,827,627 .....	14
Timed Mode (tInE) .....	14
Anti-Wrinkle Program (Grd) .....	15
Buzz/Tone (bUZ) .....	15
Free Dry Mode (FrEE) .....	15
Coin Mode (Coin) .....	16
Flash Display Status (FLS) .....	16

Bad Coin Lockout Status (bCLO) .....	16
Bad Coin Reset (bCrS) .....	16
Accumulative Time (AtIn) .....	17
Accumulative Coin (ACOn) .....	19
Rotational Safe Guard - Optional (nSEn) .....	20
PL02 - Percent Dry (PdrY) .....	20
PL05 - Low Temperature (LO°F) .....	21
PL06 - Low Cool Down Temperature/Time (LOCd) .....	21
PL07 - Permanent Press (PP°F) .....	21
PL08 - Permanent Press Cool Down Temperature/Time (PPCd) .....	21
PL09 - Left Coin Denomination (LCdE) .....	21
PL10 - Right Coin Denomination (rCdE) .....	21
PL11 - Time For Amount To Start (tFAS) .....	22
PL12 - Amount To Start (AtSt) .....	22
PL13 - Minimum Amount For Additional Time (AFAt) .....	22
PL14 - Maximum Time For Automatic Dry (Adrt) .....	22
PL15 - Anti-Wrinkle Timing .....	22
Guard Delay Time (GdLY) .....	22
Guard On Time (Gont) .....	23
PL16 - Active Guard Time (AGt) .....	23
PL17 - "A" and "b" Factors .....	23

<b>SECTION V</b>	
<b>PROGRAMMING INSTRUCTIONS .....</b>	<b>24</b>
A. Introduction To Programming .....	24
B. Programming (Flowcharts) .....	25

<b>SECTION VI</b>	
<b>PROGRAMMING .....</b>	<b>28</b>
A. Temperature Display Mode .....	28
B. Left Coin Count .....	29

C. Right Coin Count .....	30
D. Program Location 01 (PL01) .....	31
E. Program Location 02 (PL02) .....	35
F. Program Location 03 (PL03) .....	36
G. Program Location 04 (PL04) .....	37
H. Program Location 05 (PL05) .....	38
I. Program Location 06 (PL06) .....	39
J. Program Location 07 (PL07) .....	40
K. Program Location 08 (PL08) .....	41
L. Program Location 09 (PL09) .....	42
M. Program Location 10 (PL10) .....	43
N. Program Location 11 (PL11) .....	44
O. Program Location 12 (PL12) .....	45
P. Program Location 13 (PL13) .....	46
Q. Program Location 14 (PL14) .....	47
R. Program Location 15 (PL15) .....	48
S. Program Location 16 (PL16) and Program Location 17 (PL17) .....	49

<b>SECTION VII</b>	
<b>FACTORY PRESET PROGRAMS/PARAMETERS .....</b>	<b>50</b>
A. Single Coin Only .....	50
B. Dual Coin Only .....	51

<b>SECTION VIII</b>	
<b>PHASE 5 COIN SYSTEM DIAGNOSTICS .....</b>	<b>52</b>
A. Diagnostic (L.E.D.) Failure Codes .....	52
1. “door” .....	52
2. “dSFL” .....	52
3. “SEFL” .....	53
4. “Hot” .....	53

B. L.E.D. Display Indicators/Dots .....	53
1. Heat Circuit Indicator .....	53
2. Motor Circuit Indicator .....	53
C. Phase 5 Microprocessor Controller (Computer) Relay Output L.E.D. Indicators .....	54
1. "DOOR" .....	54
2. "HEAT" .....	55
3. "MTR" (motor) .....	55

# **SECTION I**

## **INTRODUCTION**

The **Phase 5 Coin Computer System** is a fully programmable, highly sophisticated dryer control system. **American Dryer Corporation** has designed the Phase 5 coin microprocessor controller (computer) to be the most versatile and reliable coin-operated control system available.

To eliminate as many moving parts as possible, **ALL** Phase 5 coin microprocessor controller (computer) programming is done through the membrane switch on the front of the control panel. The Program Switch (PS) that puts microprocessor controller (computer) into the program mode is a single program switch. This program switch eliminates the possibility of switch failure due to an accumulation of lint or moisture.

### **Phase 5 Coin Microprocessor Controller (Computer) Features**

#### **AUTOMATIC PROGRAM REVIEW**

In the program mode, the Phase 5 coin microprocessor controller (computer) will show **ALL** settings by one (1) touch of the low temperature keyboard (touch pad) selection.

#### **PROGRAMMABLE**

Changes in the programs are made at the temperature keyboard (touch pad) selection and actual programs are displayed for verification.

#### **ADJUSTABLE TIME**

Programmable from a minimum of 1 minute to a maximum of 99 minutes in 1 minute increments.

#### **COIN ACCEPTOR DENOMINATIONS**

Values of coin acceptors are programmable from a minimum value of 1 to a maximum value of 9999 for any U.S. or foreign coin denomination.

#### **AMOUNT TO START**

Programmable from a minimum value of 1 to a maximum value of 9999 in increments of one (1).

#### **ACCUMULATIVE TIME**

This program yields a specific value of time for any coin entry made after the “Amount To Start” has been inserted.

## **TIME FOR AMOUNT TO START**

This program retains the time the owner wishes to vend. The feature allows any additional purchase that is made to be calculated to the second. There is no calculation necessary by the owner. The Phase 5 coin microprocessor controller (computer) calculates the vended time.

## **ACCUMULATIVE COIN**

This program selection requires that a specific value of coin(s) be inserted for additional time, programmable from a minimum value of 1 to a maximum value of 9999 for any U.S. or foreign coin denomination.

## **COIN COUNT**

The number of coins inserted, including a separate display program for optional dual coin acceptors, can be viewed through the Phase 5 computer's light emitting diode (L.E.D.) display.

## **BAD COIN LOCKOUT**

Each coin is monitored. Should someone tamper with the coin acceptor or attempt to insert a foreign object, the microprocessor controller (computer) will "LOCKOUT" and will not accept any entries until the reset time has elapsed (approximately 15-seconds). Once the reset time has expired, the microprocessor controller (computer) will automatically reset itself for the next coin entry.

## **TEMPERATURE CONVERSION**

When the temperature conversion status is changed (i.e. from °F to °C), the Phase 5 coin microprocessor controller (computer) will automatically convert ALL temperature related programs/parameters from Fahrenheit to Celsius and vice versa. The programs affected are:

1. Temperature Display Mode
2. Temperature Selections
3. Cool Down Temperatures

## **DRYING TEMPERATURES**

Any of the three (3) selections (HI/LO/PP) are programmable from a minimum of 100° F to a maximum of 160° F in ten-degree increments or from a minimum of 38° C to a maximum of 71° C in five-degree increments.

## **COOL DOWN TIME**

ALL three (3) temperature selections are programmable from a minimum of 0 minutes to a maximum of 9 minutes in 1 minute increments.

## **COOLDOWN TEMPERATURES**

In the automatic or free dry modes, the cool down cycle termination is programmable from a minimum of 70° F to a maximum of 160° F in ten-degree increments or from a minimum of 21° C to a maximum of 71° C in five-degree increments.

## **AUTOMATIC MODE (Patent No. 4,827,627)**

This program selection uses ADC's patented Auto-Dry cycle. The microprocessor controller (computer) will calculate the percent of the dryness and read "donE" when complete. The Phase 5 coin microprocessor controller (computer) can be programmed to have a maximum time for the "Auto Mode." The Automatic Cycle (Mode) can be used in either the "Free Dry" Mode or the "Coin" Mode.

## **ANTI-WRINKLE**

This program selection helps keep permanent press items wrinkle free when they are not removed from the dryer promptly at the end of the drying and cooling cycles. The Anti-Wrinkle program settings are:

1. Guard Delay Time ..... 1 to 9 minutes
2. Guard On Time ..... 1 to 99-seconds
3. Active Guard Time ..... 1 to 99 minutes

## **FREE DRY MODE**

In this program selection, the dryer can be started without the insertion of coins by simply pressing any one (1) of the three (3) temperature selections. When set in the "Free Dry" Mode, the Phase 5 coin microprocessor controller (computer) can also be programmed to run with an Automatic Cycle (percent of dryness) or with a Timed Cycle. If the "Free Dry" program is utilized, the computer's light emitting diode (L.E.D.) display will cycle back and forth between "FILL" to "FrEE," unless otherwise programmed.

## **L.E.D. FLASH DISPLAY**

Programmable to allow the L.E.D. readout to display a choice of "FILL" (no cycle in progress), "Amount To Start" (i.e., 25¢), or in the case of free dry, "FrEE." This program selection also allows the L.E.D. display to flash back and forth every 2-seconds from "FILL" to "Amount To Start," or in the case of free dry, from "FILL" to "FrEE."

## **AUDIBLE TONE**

In this program selection, a tone (buzzer) will sound for each coin inserted, program entry, or at the drying and cooling cycles for a period of 5-seconds to indicate that the cycle is complete. Additionally, when in the Anti-Wrinkle program, the tone (buzzer) will sound for 5-seconds at the end of the "Guard On Time."

## **TEMPERATURE DISPLAY**

This program selection enables the temperature in the dryer to be viewed (°F or °C) either while the dryer is off or running. This service feature shows that the dryer is maintaining the selected temperature.

## **DIAGNOSTICS**

**ALL** major circuits, including door, microprocessor temperature sensor, heat, and motor circuits are monitored. There are also indicators installed on the outputs of each relay to easily identify failures, and the door switch has an indicator installed on the Phase 5 microprocessor controller (computer) to help indicate failure.

## **AUTOMATIC DRY TIME**


This program selection allows the dryer to run up to a specific time. During the “AUtO” mode or “FrEE” dry mode this program is only designed to limit the dryer’s operation during the drying cycle.

## **ROTATIONAL SAFE GUARD (Optional)**

This program monitors the rotation of the basket (tumbler). If the basket (tumbler) is not rotating, the Phase 5 coin microprocessor controller (computer) will disable **ALL** outputs, an audible tone (buzzer) will sound, and an error message will be displayed. This program selection can be programmed to be in the inactive mode.

## SECTION II

### L.E.D. DISPLAY AND CODES

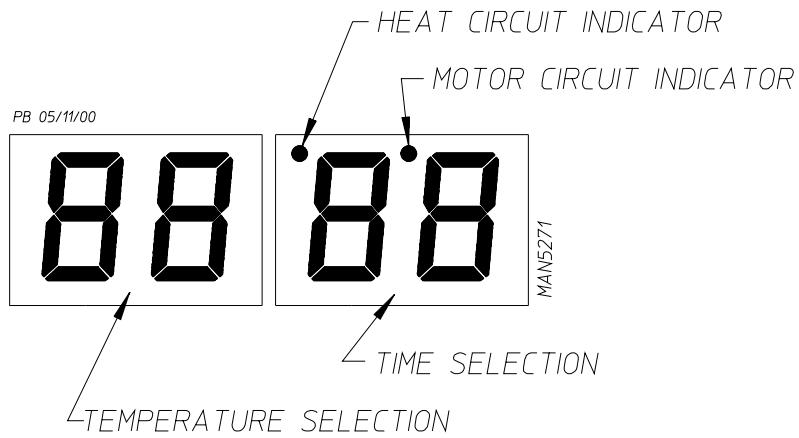

<b>A</b>	Automatic Cycle (Slope Program Factor)
<b>ACOn</b>	Accumulative Coin
<b>Adrt</b>	Maximum Auto Dryness Time
<b>AFAt</b>	Amount for Additional Time
<b>AGt</b>	Active Anti-Wrinkle Guard Time
<b>AtIn</b>	Accumulative Time
<b>AtSt</b>	Amount To Start
<b>AUto</b>	Automatic Mode ( <b>Patent No. 4,827,627</b> )
<b>b</b>	Automatic Cycle (Heat Loss [offset] Factor)
<b>bCLO</b>	Bad Coin Lockout
<b>bCrS</b>	Bad Coin Reset
<b>bUZ</b>	Buzzer (Tone)
<b>°CEL</b>	Degree in Celsius
<b>CLCC</b>	Clear Left Coin Count
<b>Coin</b>	Coin Mode
<b>CrCC</b>	Clear Right Coin Count
<b>donE</b>	Drying and Cooling Cycles Complete or Dryer is in Anti-Wrinkle Cycle
<b>door</b>	Door Circuit is Open*
<b>dSFL</b>	Dryer Sensor Circuit Failure*

Continued on Next Page

<b>°FAr</b>	Degree in Fahrenheit
<b>FILL</b>	No Cycle in Progress
<b>FLS</b>	Flash Display Active
<b>FrEE</b>	Free Dry Mode
<b>GdLY</b>	Anti-Wrinkle Delay Time
<b>Gont</b>	Anti-Wrinkle On Time
<b>Grd</b>	Anti-Wrinkle Program Active
<b>HICd</b>	High Cool Down
<b>Hot</b>	Overheating Condition*
<b>LCC</b>	Left Coin Count
<b>LCdE</b>	Left Coin Denomination
<b>LOCd</b>	Low Cool Down
<b>nbUZ</b>	No Buzzer (Tone)
<b>nFLS</b>	No Flash Display
<b>nGrd</b>	No Anti-Wrinkle
<b>nSEn</b>	No Rotational Sensor Selected
<b>PdrY</b>	Percent Dry
<b>PL</b>	Program Location
<b>PLOC</b>	Program Location Automation Review
<b>PPCd</b>	Permanent Press Cool Down
<b>PP<sup>o</sup>F</b>	Permanent Press
<b>PUSH</b>	Amount To Start Has Been Inserted Make Temperature Selection
<b>rCC</b>	Right Coin Count
<b>rCdE</b>	Right Coin Denomination
<b>SEFL</b>	Rotational Sensor Circuit Failure*
<b>SEn</b>	Rotational Sensor Selected
<b>tFAS</b>	Time For Amount To Start
<b>tInE</b>	Timed Mode

\* Refer to **Phase 5 Coin System Diagnostics** in **Section VIII** of this manual for detailed information.

## **SECTION III**

### **OPERATING INSTRUCTIONS**

**NOTE:** Unless otherwise specified at the time of ordering, the Phase 5 coin microprocessor controller (computer) has been preprogrammed by the factory with the parameters shown on [page 50](#) and [page 51](#). Should program changes be found necessary, please read this [Phase 5 Coin User's Manual](#) carefully to thoroughly familiarize yourself with the Phase 5 coin microprocessor controller (computer) programming characteristics.

#### **A. TIMED MODE**

1. When turning on power with no remaining credit or when no cycle is in progress, the light emitting diode (L.E.D.) display will read “FILL” and/or “Amount To Start” (“AtSt”).
2. Insert coin(s). Once the correct “Amount To Start” has been inserted, the L.E.D. display will read “PUSH.”
3. Select temperature by pushing “HI TEMP,” “LO TEMP,” or “PERM PRESS.” The dryer will start and the L.E.D. display will read the temperature cycle selected and the drying time.
4. The dryer will continue through the drying and cooling cycles, showing time counting downward.

**NOTE:** If the door is opened during a cycle, both the heat and motor will stop. However, the Phase 5 coin microprocessor controller (computer) will continue to count downwards in time. Continuation of the cycle will resume only after the door has been closed and any one (1) of the three (3) temperature selection buttons is again depressed.

5. Upon completion of the drying and cooling cycles, the buzzer (tone) will sound, and the L.E.D. display will read “donE” for 5-seconds, at which time the dryer will shut off.

**NOTE:** If the Anti-Wrinkle Program is active (“Grd”), the L.E.D. display will remain reading “donE,” and the Phase 5 coin microprocessor controller (computer) will proceed through the Anti-Wrinkle Program until the maximum “Guard On Time” has expired or until the door is opened, whichever comes first. The L.E.D. display will read “FILL” and/or “Amount To Start” (“AtSt”).

**NOTE:** If the Anti-Wrinkle Program **is not** active (“nGrd”) the L.E.D. display will read “donE” until the main door is opened, at which time the L.E.D. display will read “FILL” and/or “Amount To Start.”

## **B. AUTOMATIC MODE (PATENT NO. 4,827,627)**

1. When turning on power with no remaining credit or when no cycle is in progress, the light emitting diode (L.E.D.) display will read “FILL” and/or “Amount To Start” (“AtSt”).
2. Insert coin(s). Once correct “Amount To Start” has been inserted, the L.E.D. display will read “PUSH.”
3. Select temperature by pushing “HI TEMP,” “LO TEMP,” or “PERM PRESS.” The dryer will start, the L.E.D. display will read the temperature cycle selected, and the drying time portion of the L.E.D. display will read “00” and count upward as time elapses.

**NOTE:** If the door is opened during a cycle, both the heat and motor will stop. However, the Phase 5 coin microprocessor controller (computer) will continue to count upwards in time. Continuation of the cycle will resume only after the door has been closed and any one (1) of the three (3) temperature selection buttons is again depressed.

4. Once the preprogrammed dryness level and cool down period have been reached or maximum automatic time has expired, whichever comes first, the buzzer (tone) will sound, and the L.E.D. display will read “donE” for 5-seconds, at which time the dryer will shut off.

**NOTE:** If the Anti-Wrinkle Program is active (“Grd”), the L.E.D. display will remain reading “done,” and the Phase 5 coin microprocessor controller (computer) will proceed through the Anti-Wrinkle Program until the maximum “Guard On Time” has expired or until the door is opened, whichever comes first. The L.E.D. display will read “FILL” and/or “Amount To Start” (“AtSt”).

**NOTE:** If the Anti-Winkle Program **is not** active (“nGrd”) the L.E.D. display will read “donE” until the main door is opened, at which time the L.E.D. display will read “FILL” and/or “Amount To Start.”

## C. FREE DRY MODE

1. When turning on power with no credit remaining or when no cycle is in progress the light emitting diode (L.E.D.) display will read “FILL” and/or “FrEE.”
2. Select temperature. The dryer will start, the L.E.D. display will read the temperature cycle selected and the drying time portion of the L.E.D. display will read the temperature cycle selected. The drying time portion of the L.E.D. drying will read “00” and count upward as time elapses, or the vended time will count downward, depending on which parameter is programmed.

**NOTE:** If the door is opened during a cycle, both the heat and motor will stop. However, the Phase 5 coin microprocessor controller (computer) will continue to count the time, either upward or downward, depending on which parameter is programmed. Continuation of the cycle will resume only after the door has been closed and any one (1) of three (3) temperature selection buttons is again depressed.

3. Once the preprogrammed dryness level and cool down period has been reached or maximum automatic time has expired, whichever comes first, the buzzer (tone) will sound, and the L.E.D. display will read “donE” for 5-seconds, at which time the dryer will shut off.

**NOTE:** If the Anti-Wrinkle Program is active (“Grd”), the L.E.D. display will remain reading “donE,” and the Phase 5 coin microprocessor controller (computer) will proceed through the Anti-Wrinkle Program until the maximum “Guard On Time” has expired or until the door is opened, whichever comes first. The L.E.D. display will read “FILL” and/or “Amount To Start” (“AtSt”).

**NOTE:** If the Anti-Wrinkle Program is not active (“nGrd”) the L.E.D. display will read “donE” until the main door is opened, at which time the L.E.D. display will read “FILL” and/or “Amount To Start.”

## **SECTION IV**

### **PROGRAM SELECTION**

**NOTE:** Programs are stored in the Phase 5 coin microprocessor controller (computer) memory and are cataloged as Program Locations (PL).

#### **TEMPERATURE DISPLAY MODE**

By closing the Program Switch (PS) located on the bottom side of the Phase 5 coin microprocessor controller (computer) the light emitting diode (L.E.D.) display will read the temperature in the dryer in either Fahrenheit ( $^{\circ}\text{F}$ ) or Celsius ( $^{\circ}\text{C}$ ), depending on how the temperature conversion status is in **PL01**. The temperature display mode can be activated while the dryer is in the operating cycle, or off. While in the operating cycle, the circuit indicators are visible for troubleshooting purposes.

**NOTE:** The dryer **cannot** be started while the Phase 5 coin microprocessor controller (computer) Program Switch (PS) is closed unless the cycle was already in progress.


#### **RIGHT COIN COUNT (rCC)/LEFT COIN COUNT (LCC)**

The “HI TEMP” key lets the operator review the coin counters. If the operator presses the “HI TEMP” key, the computer displays “\_LCC.” The operator could then press either the “PERM PRESS” key to view the “Left Coin Count” or the “HI TEMP” key and the computer would display “\_rCC.” Again, the operator could press the “PERM PRESS” key to view the “Right Coin Count.” While displaying the coin count, if the operator presses the “HI TEMP” key the computer then displays “CxCC” (x = “r” or “L”) to indicate “clearing” the coin count. The operator then presses the “PERM PRESS” key to clear the coin count or the “HI TEMP” or “LO TEMP” key to exit without clearing the coin count.

## AUTOMATIC REVIEW OF PROGRAM LOCATION (PL)

This selection allows for the AUTOMATIC REVIEW of what the program locations are set (programmed) for, thereby eliminating the need to go into each and every PL manually for verification. By closing the Programming Switch (PS) with no cycle in progress, the light emitting diode (L.E.D.) display will read the temperature in the dryer. Then, by pressing the “LO TEMP” key, the L.E.D. display will read “PLOC” for 1-second. Then the Phase 5 coin microprocessor controller (computer) will go into the Automatic Review Mode, the Program Location numbers (i.e., **PL01**, **PL02**, etc.) will not be shown and each parameter (i.e., “**FAr**,” “**tInE**,” “**Grd**,” etc.) will be displayed for approximately 1-second each. The Automatic Review can be stopped/exited at any time by simply pressing the “PERM PRESS” key, at which time the L.E.D. display will read “0000” for 1-second and then return to the Temperature Display mode.

BOTTOM VIEW

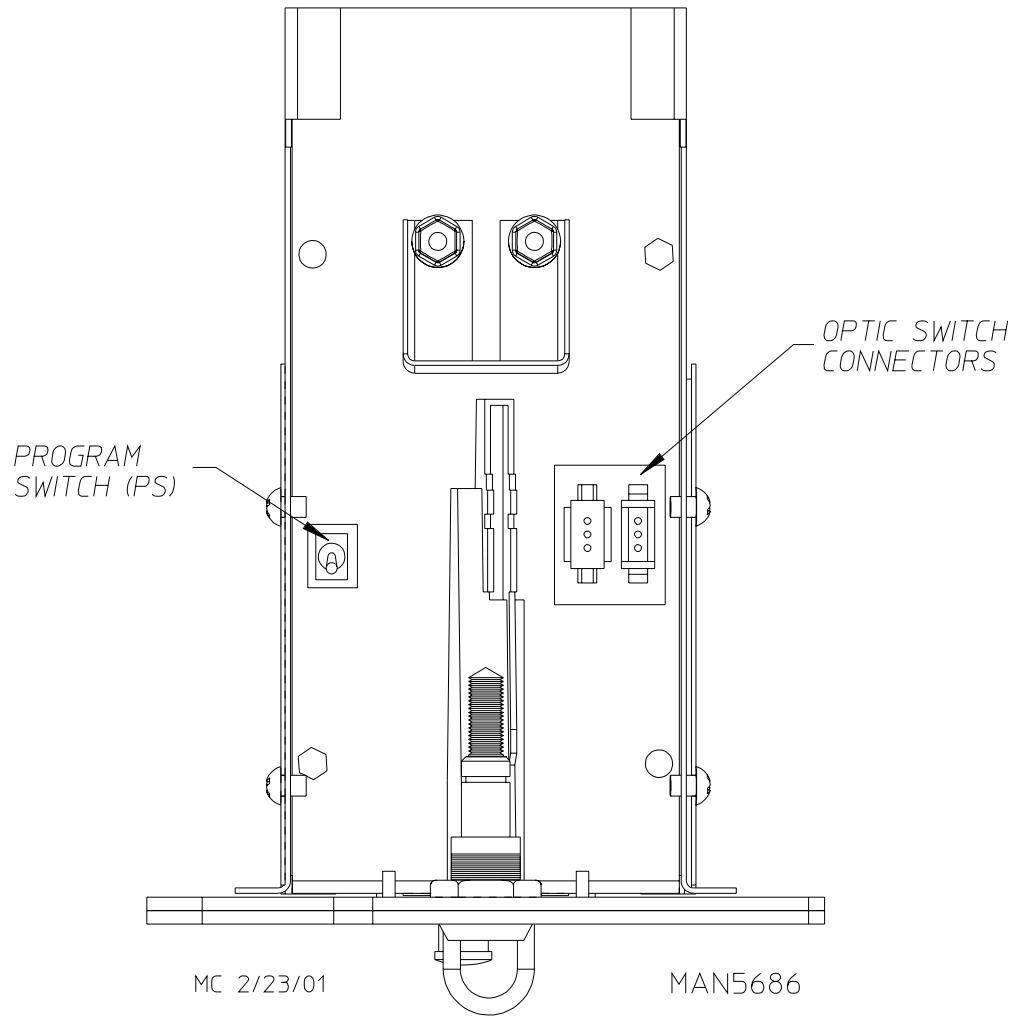

## **PL01 - TEMPERATURE CONVERSION STATUS**

This program controls whether the temperature related programs will be operated in Fahrenheit (°F) or Celsius (°C). The programs affected are:

1. Temperature Display Mode
2. Selection Cycling Temperatures
3. Cool Down Temperatures

## **AUTOMATIC MODE (AUtO) Patent No. 4,827,627**

When this parameter (“AUtO”) is selected, the dryer will run for a preset level of dryness (**PL02**) or until the programmed automatic maximum time (**PL14**) has expired.

At the end of the drying cycle, the dryer will go into the cool down cycle for the time period programmed (**PL04, PL06, or PL08**) or until the temperature has dropped to the programmed cool down temperature (**PL04, PL06, or PL08**).

**NOTE:** Due to humidity, atmospheric pressure, percentage of extraction, etc., the desired dryness level may vary. It is suggested that the owner determine which level of dryness (90% to 100%) is best suited for his/her application by experimenting with a few test loads.

**NOTE:** When programming, to use the Automatic Mode (“AUtO”) (**Patent No. 4,827,627**), the following parameters/programs need to be checked and/or changed accordingly:

<b>PL01</b>	.....	“AUtO”
		“FrEE” or “Coin” (coins required to start)
<b>PL02</b>	.....	“PdrY” (percent dry from 90% to 100%)
<b>PL14</b>	.....	“Adrt” (maximum auto dry time)
<b>PL17</b>	.....	“A” and “b” Factors

## **TIMED MODE (tInE)**

When this parameter is selected (“tInE”) and the Phase 5 coin microprocessor controller (computer) has been activated, the dryer will continue to run until the preset time, including the cool down period (**PL04, PL06, or PL08**), has elapsed, at which time the dryer will continue to run until the preset time, including the cool down period (**PL04, PL06, or PL08**), has elapsed, at which time the dryer will cycle off or go into the optional Anti-Wrinkle Program.

## **ANTI-WRINKLE PROGRAM (Grd)**

This feature can be used in conjunction with any of the three (3) operating modes (Coin Mode, Auto Mode, or the Free Dry Mode). In this program (“Grd”), when the drying and cooling cycles are completed, the dryer will shut off, the buzzer (tone) will sound, and the light emitting diode (L.E.D.) display will read “donE.” If the door is not opened, the Phase 5 coin microprocessor controller (computer) will wait until the “Guard Delay Time” (**PL15**) has expired, at which time the clothes will be tumbled (without heat) for the programmed “Guard On Time” (**PL15**). The Phase 5 coin microprocessor controller (computer) will repeat this process until the programmed “Active Guard Time” (**PL16**) has expired or until the dryer door is opened, at which time the L.E.D. display will read “FILL” and/or “Amount To Start” (“AtSt”) or “FILL” and/or “FrEE.”

**NOTE:** When programming the use of the Anti-Wrinkle Program (“Grd”), the following parameters/programs need to be checked and/or changed accordingly:

- PL01** ..... “Grd” (Anti-Wrinkle Program active)  
“bUZ” or “nbUZ” (Buzzer [Tone] active/not active)
- PL15** ..... “GdLY” (Guard Delay Time)  
“Gont” (Guard On Time)
- PL16** ..... “AGt” (active guard time)

## **BUZZ/TONE (bUZ)**

With the Anti-Wrinkle Program active, the option is available to have the buzzer/tone (“bUZ”) sound for a period of 5-seconds at the end of each “Guard On Time” cycle, or, no buzzer (“nbUZ”) sound.

## **FREE DRY MODE (FrEE)**

The Phase 5 coin microprocessor controller (computer) can be programmed to run without the insertion of coins. When the Phase 5 coin computer is in the “FrEE” dry mode, it may be programmed to run in the “AUtO” (Automatic) Mode or the “tInE” (Timed) Mode.

**NOTE:** When programming the use of the Free Dry Mode (“FrEE”), the following parameters/programs need to be checked and/or changed accordingly:

- PL01** ..... “AUtO” (automatic drying cycle) or  
“tInE” (timed drying cycle) “FrEE”
- PL02\*** ..... “PdrY” (percent dry)
- PL14\*** ..... “Adrt” (maximum auto dry time)
- PL17\*** ..... “A” and “b” factors

\* Needs to be programmed only if PL01 “AUtO” cycle is chosen.

## **COIN MODE (COIN)**

In this program mode (“Coin”), coins are required to start the dryer, even if the Phase 5 coin microprocessor controller (computer) is set in the Automatic Mode (**Patent No. 4,827,627**).

**NOTE:** When programming the use of the Coin Mode, (“Coin”), the following parameters/programs need to be checked and/or changed accordingly:

- PL01** ..... “AUtO” (automatic drying cycle) or  
“tInE” (timed drying cycle) “FrEE”
- PL02\*** ..... “PdrY” (percent dry)
- PL11** ..... “tFAS” (time for amount to start)
- PL12** ..... “AtSt” (amount to start)
- PL14\*** ..... “Adrt” ( maximum auto dry time)
- PL17\*** ..... “A” and “b” Factors

\* Needs to be programmed only if PL01 “AUtO” cycle is chosen.

## **FLASH DISPLAY STATUS (FLS)**

When the Phase 5 coin microprocessor controller (computer) is set in this program status (“FLS”) it allows the light emitting diode (L.E.D.) readout to display “FILL” and/or “FrEE” (no cycle in progress), and/or “Amount To Start” (**PL12**) or, in the case of free dry, “FrEE.” The programming allows the L.E.D. readout to flip-flop back and forth every 2-seconds from “FILL” to “Amount To Start,” or in the case of free dry, from “FILL” to “FrEE.” If the L.E.D. display is programmed for “No Flash” (“nFLS”), the microprocessor controller (computer) will then prompt you on whether you would like “FILL” displayed or the “Amount To Start” (“AtSt”).

## **BAD COIN LOCKOUT STATUS (bCLO)**

In this program status (“bCLO”), each coin entry is monitored. Should someone tamper with the coin acceptor or attempt to insert a foreign object, the Phase 5 coin microprocessor controller (computer) will “LOCKOUT” and not accept any entries until the reset time has elapsed (approximately 15-seconds). Once the reset time has expired, the Phase 5 coin microprocessor controller (computer) will automatically reset itself immediately for the next entry.

## **BAD COIN RESET (bCrS)**

When set in this program (“bCrS”), the Phase 5 coin microprocessor controller (computer) counts in milliseconds the amount of time required for a coin entry signal. If someone should tamper with the coin acceptor or attempt to insert a foreign object, the Phase 5 coin microprocessor controller (computer) will not accept the entry and will automatically reset itself immediately for the next entry.

## **ACCUMULATIVE TIME (AtIn)**

### **(SINGLE COIN)**

In the accumulative time (“AtIn”) mode, each coin inserted has a specific value in time which is determined by the “Time For Amount To Start” (“tFAS”) program (**PL11**).

**Example No. 1:** If the dryer is equipped with a 25¢ coin acceptor and the desired time is 30 minutes, each additional coin inserted would yield 30 minutes.

<b>Settings:</b>	<b>PL09 (LCdE) .....</b>	<b>25</b>
	<b>PL11 (tFAS) .....</b>	<b>30</b>
	<b>PL12 (AtSt) .....</b>	<b>25</b>

**Example No. 2:** If the dryer is equipped with a 25¢ coin acceptor and the “Amount To Start” (“AtSt”) is 50¢ for 30 minutes, the insertion of each additional coin would yield 15 minutes. In this application the “Time For Amount To Start” (“tFAS”) is determined by a Phase 5 coin microprocessor controller (computer) calculation. There is no calculation required by the owner.

**Formula:** (LCdE/AtSt) (tFAS) = Vended Time for “LCdE” (25¢/50¢) (30) = 15 Minutes

<b>Settings:</b>	<b>PL09 (LCdE) .....</b>	<b>25</b>
	<b>PL11 (tFAS) .....</b>	<b>30</b>
	<b>PL12 (AtSt) .....</b>	<b>50</b>

### **(DUAL COIN)**

In the accumulative time (“AtIn”) mode, when using a dual coin acceptor, once the “Amount To Start” (“AtSt”) has been inserted, the addition of a coin yields more time. The amount time accumulated for each additional coin inserted is determined by the “Time For Amount To Start” (“tFAS”) program (**PL11**).

The “Time For Amount To Start” (“tFAS”) is determined by a Phase 5 coin microprocessor controller (computer) calculation of additional amounts installed.

**Formula:** (LCdE/AtSt) (tFAS) = Vended Time

**Example No. 1:** Using a 10¢/25¢ dual coin acceptor with the desired “Amount To Start” (“AtSt”) being 25¢ for 15 minutes, each additional 10¢ would yield the following:

**Formula:** (LCdE/AtSt) (tFAS) = Vended Time for “LCdE” (10¢/25¢) (15 minutes) = 6 minutes

<b>Settings:</b>	<b>PL09 (LCdE) .....</b>	<b>10</b>
	<b>PL10 (rCdE) .....</b>	<b>25</b>
	<b>PL11 (tFAS) .....</b>	<b>15</b>
	<b>PL12 (AtSt) .....</b>	<b>25</b>

**Example No. 2:** If the dryer is equipped with a 10¢/25¢ dual coin acceptor and the desired “Amount To Start” (“AtSt”) is 35¢ for 14 minutes, each additional 10¢ inserted would yield 4 minutes and each additional 25¢ would yield 10 minutes.

**Formula:** (LCdE/AtSt) (tFAS) = Vended Time for “LCdE” (10¢/35¢) (14 minutes) = 4 minutes

**Settings:**

<b>PL09 (LCdE)</b>	<b>.....10</b>
<b>PL10 (rCdE)</b>	<b>.....25</b>
<b>PL11 (tFAS)</b>	<b>.....14</b>
<b>PL12 (AtSt)</b>	<b>.....35</b>

**Example No. 3:** If the dryer is equipped with a 10¢/25¢ dual coin acceptor and the desired “Amount To Start” (“AtSt”) is 55¢ for 33 minutes, each additional 10¢ inserted would yield 6 minutes, and each additional 25¢ would yield 15 minutes.

**Formula:** (LCdE/AtSt) (tFAS) = Vended Time for “LCdE” (10¢/55¢) (33 minutes) = 6 minutes

**Settings:**

<b>PL09 (LCdE)</b>	<b>.....10</b>
<b>PL10 (rCdE)</b>	<b>.....25</b>
<b>PL11 (tFAS)</b>	<b>.....33</b>
<b>PL12 (AtSt)</b>	<b>.....55</b>

**NOTE:** If the total Vend Time cannot be divided evenly by the “Amount To Start” (“AtSt”), the “Time For Amount To Start” (“tFAS”) will calculate precisely the amount of the time entitled to the purchaser.

**Formula:** (LCdE/AtSt) (tFAS) = Vended Time for “LCdE” (10¢/35¢) = 2.85 minutes  
(2 minutes and 51-seconds)

**Settings:**

<b>PL09 (LCdE)</b>	<b>.....10</b>
<b>PL10 (rCdE)</b>	<b>.....25</b>
<b>PL11 (tFAS)</b>	<b>.....10</b>
<b>PL12 (AtSt)</b>	<b>.....35</b>

## **ACCUMULATIVE COIN (ACOn)**

When this program mode (“ACOn”) is selected, additional time can only be achieved when the “Amount for Additional Time” (“AFAt”) **PL13** has been inserted.

**NOTE:** When programming, to use the Accumulative Coin Mode (“ACOn”), the following parameters/programs need to be checked and/or changed accordingly:

**Settings:** **PL01** ..... “ACOn” (“Accumulative Coin”)  
**PL13** ..... “AFAt” (“Amount for Additional Time”)

## **(SINGLE COIN ACCEPTOR)**

**Example No. 1:** Using a 25¢ coin acceptor with the desired “Amount To Start” (“AtSt”) being 50¢ for 24 minutes, the Phase 5 coin microprocessor controller (computer) would yield more time (24 minutes) only when an additional 50¢ is inserted. For this application, the “Time For Amount To Start” (“tFAS”) program (**PL11**) is determined as follows:

**Formula:** (AFAt/AtSt) (tFAS) = Vended Time for “AFAt” (50¢/50¢) (24 minutes) = 24 minutes

**Settings:** **PL09 (LCdE)** ..... 25  
**PL11 (tFAS)** ..... 24  
**PL12 (AtSt)** ..... 50  
**PL13 (AFAt)** ..... 50

## **(DUAL COIN ACCEPTOR)**

With a dual coin acceptor the “Time For Amount To Start” (“tFAS”) is determined as shown below:

**Formula:** (AFAt/AtSt) (tFAS) = Vended Time for “AFAt”

**Example No. 1:** Using a 10¢/25¢ dual coin acceptor the desired “Amount To Start” (“AtSt”) is 50¢ for 20 minutes and the “Amount for Additional Time” (“AFAt”) is set for 20¢, each additional 20¢ would yield 8 minutes.

**Formula:** (AFAt/AtSt) (tFAS) = Additional Vended Time (20¢/50¢) (20 minutes) = 8 minutes

**Settings:** **PL09 (LCdE)** ..... 10  
**PL10 (rCdE)** ..... 25  
**PL11 (tFAS)** ..... 20  
**PL12 (AtSt)** ..... 50  
**PL13 (AFAt)** ..... 20

**Example No. 2:** If the dryer is equipped with a 10¢/25¢ dual coin acceptor and the desired “Amount To Start” (“AtSt”) is 35¢ for 14 minutes and the “Amount for Additional Time” (“AFAt”) is set for 25¢, each additional 25¢ inserted would yield 10 minutes.

**Formula:** (AFAt/AtSt) (tFAS) = Vended Time for “AFAt” (25¢/35¢) (14 minutes) = 10 minutes

<b>Settings:</b>	<b>PL09 (LCdE)</b>	<b>10</b>
	<b>PL10 (rCdE)</b>	<b>25</b>
	<b>PL11 (tFAS)</b>	<b>14</b>
	<b>PL12 (AtSt)</b>	<b>35</b>
	<b>PL13 (AFAt)</b>	<b>25</b>

### **ROTATIONAL SAFE GUARD - OPTIONAL (nSEn)**

This program monitors the rotation of the basket (tumbler) and works in conjunction with a special sensor (optional) located at the rear basket (tumbler) support area of the dryer. If the basket (tumbler) is not rotating (i.e., broken belt, failed motor, etc.), the Phase 5 microprocessor controller (computer) will disable **ALL** outputs (shut the dryer down), the buzzer (tone) will sound (for time programmed), and the light emitting diode (L.E.D.) display will read a failure message “SEFL” (Rotational Sensor Circuit Failure). The failure code **must be cancelled manually** by opening and closing the Program Switch (PS). This program selection (option) can be programmed to be active (“SEn”) or inactive (“nSEn”).

**NOTE:** This parameter is programmed by the factory to be active (“SEn”).

### **PL02 - PERCENT DRY (PdrY)**

When in the automatic mode, the dryer will run until the preset level of dryness has been reached or until the Maximum Auto Dryness Time (Adrt) has been reached or until the Maximum Auto Dryness Time (Adrt) has expired. The dryness level is programmable from a minimum of ninety percent (90%) to a maximum of one hundred percent (100%).

**NOTE:** Due to humidity, atmospheric pressure, water retention in the garment etc., the desired “Percent Dry” (“PdrY”) may vary. It is suggested that the owner determine which level of dryness (90% to 100%) is best suited for his/her application by experimenting with a few test loads.

### **PL03 - HIGH TEMPERATURE (HI°F)**

The high (HI) operating temperature is programmable from a minimum of 100° F to a maximum of 160° F in ten-degree increments or from a minimum of 38° C to a maximum of 71° C in five-degree increments.

### **PL04 - HIGH COOL DOWN TEMPERATURE/TIME (HICd)**

The first part of this program controls the cool down temperature when the Phase 5 microprocessor controller (computer) is used in the automatic mode. The cool down temperature is programmable from a minimum of 70° F to a maximum of 160° F in ten-degree increments or from a minimum of 21° C to a maximum of 71° C in five-degree increments.

The second part of this program controls the cool down time for both the automatic and timed modes. The cool down time can be programmed from a minimum of 0 to a maximum of 9 minutes.

**NOTE:** When the Phase 5 microprocessor controller (computer) is used in the automatic mode, at the end of the drying cycle, the Phase 5 microprocessor controller (computer) will start the cooling cycle for the cool down time programmed or until the temperature has dropped to the programmed cool down temperature, whichever of the two (2) comes first.

#### **PL05 - LOW TEMPERATURE (LO°F)**

Same as **PL03** but for Low Temperature program.

#### **PL06 - LOW COOL DOWN TEMPERATURE/TIME (LOCd)**

Same as for **PL04** but for Low Cool Down Temperature/Time.

#### **PL07 - PERMANENT PRESS (PP°F)**

Same as **PL03** but for Permanent Press.

#### **PL08 - PERMANENT PRESS COOLDOWN TEMPERATURE/TIME (PPCd)**

Same as **PL04** but for Permanent Press Cool Down Temperature/Time.

#### **PL09 - LEFT COIN DENOMINATION (LCdE)**

In the case of a single coin acceptor, this program setting is determined by the value of the coin acceptor (i.e., 25¢).

When a dual coin acceptor is used, the program setting is determined by the left coin slot value (lower coin value).

Program settings are from a minimum of 1 to a maximum of 9999.

#### **PL10 - RIGHT COIN DENOMINATION (rCdE)**

This program need only be set when a dual coin acceptor is used. The program setting is determined by the value of the right coin acceptor slot (higher value).

Program settings are from a minimum of 1 to a maximum of 9999.

When used in conjunction with the Left Coin Denomination program, the Phase 5 microprocessor controller (computer) automatically calculates the ratios necessary for coin insertion time values.

## **PL11 - TIME FOR AMOUNT TO START (tFAS)**

This program is set for the specific value in TIME that will be vended for the programmed “Amount To Start” (“AtSt”) the dryer. For example, if 25¢ is required to start the dryer for 10 minutes, the settings would be:

**PL11** “Time For Amount To Start” ..... “tFAS” = 10

**PL12** “Amount To Start” ..... “AtSt” = 25

In addition, with the “Time For Amount To Start” (“tFAS”) and the “Amount To Start” (“AtSt”) programmed along with the type of coin acceptor (denominations) on the dryer (i.e. 10¢/25¢), the Phase 5 microprocessor controller (computer) will do **ALL** calculations and vend the correct amount of time for any coin inserted after the initial “Amount To Start” has been inserted - including both accumulative coin program settings. For example, if a dryer is equipped with a 10¢/25¢ dual coin acceptor and the desired “Amount To Start” (“AtSt”) is 55¢ for 33 minutes (“tFAS”), with the microprocessor controller (computer) set for accumulative time 10¢/25¢ dual coin acceptor and the desired “Amount To Start” (“AtSt”) is 55¢ for 33 minutes (“tFAS”), with the microprocessor controller (computer) set for accumulative time, after initial “Amount To Start” is inserted (55¢), each additional 10¢ inserted would yield 6 minutes, and each additional 25¢ inserted would yield 15 minutes.

## **PL12 - AMOUNT TO START (AtSt)**

This program sets the “Amount To Start” (“AtSt”) the dryer and can be programmed from a minimum of 1 to a maximum of 9999.

## **PL13 - MINIMUM AMOUNT FOR ADDITIONAL TIME (AFAT)**

This program need only be set when the Phase 5 microprocessor controller (computer) is set in the “Accumulative Coin” (“ACOn”) mode (**PL01**). The value set for this program is what will have to be inserted for more time after the “Amount To Start” (“AtSt”) has been inserted.

**Example No. 1:** “Amount To Start” (“AtSt”) is 50¢ for 30 minutes and an additional 50¢ is required for more time. In this example **PL13** should be set for 50¢.

## **PL14 - MAXIMUM TIME FOR AUTOMATIC DRY (Adrt)**

This program is used only when the Phase 5 microprocessor controller (computer) is set in the Automatic Mode. This program controls the maximum time the dryer will run even if the Dryness Level program (**PL02**) has not been reached.

## **PL15 - ANTI-WRINKLE TIMING**

### **1. Guard Delay Time (GdLY)**

This program controls the dwell (stop) time and activation of anti-wrinkle “Guard On Time” (“Gont”). The dwell (stop) time can be programmed from a minimum of 1 minute to a maximum of 9 minutes in 1 minute increments.

## 2. Guard On Time (Gont)

The setting controls the amount of time that the basket (tumbler) will turn, without heat, when the Anti-Wrinkle is active (“Grd”). The “Guard On Time” (“Gont”) is programmable from a minimum of 1-second to a maximum of 99-seconds in 1-second increments.

### **PL16 - ACTIVE GUARD TIME (AGt)**

This program controls the maximum time that the Anti-Wrinkle Program will be active and is programmable from a minimum of 1 minute to a maximum of 99 minutes in 1 minute increments.

### **PL17 - “A” and “b” FACTORS**

This location will include the “Auto-Cycle” parameters. These parameters are necessary to allow the Phase 5 microprocessor controller (computer) to calculate the percentage of dryness in the basket (tumbler). The “A” Factor is adjustable from 1 to 99.

These parameters are the factors that the Phase 5 microprocessor controller (computer) utilizes when programmed for an “Automatic Drying Cycle.” The “A” Factor slope program, pertains to the thermal characteristic of each model dryer. The “b” Factor, heat loss (offset) program, also pertains to the thermal characteristics of each model dryer. This factor setting is dependent upon the model dryer and type of heating unit.

The “A” **and** “b” Factors have not been preprogrammed by the factory and **must be** programmed if the Phase 5 microprocessor controller (computer) programming is changed to be used in the Automatic Mode. The “A” **and** “b” Factors **must be** programmed for the particular dryer model and heating unit. For more specific information on “A” **and** “b” settings, contact the **ADC** factory technical support department.

# **SECTION V**

## **PROGRAMMING INSTRUCTIONS**

### **A. INTRODUCTION TO PROGRAMMING**

The various program (parameter) dryer selections are stored in the computer memory and are cataloged as “Program Locations” (PL) 1 through 17. These programs (parameters) have been preprogrammed by the factory as noted on [page 50](#) and [page 51](#) of this manual. The various program selections available are outlined in the previous section (**Section IV**).

**ALL** programming is done through the keyboard (touch pad) selection buttons on the front of the control panel. To change programs (parameters) or to put the Phase 5 microprocessor controller (computer) in the temperature display mode or the coin count display mode, the Program Switch (PS) located on the bottom side of the microprocessor controller (computer) **must be** switched to the closed position (PSC).

First make sure there is no cycle in progress and the light emitting diode (L.E.D.) display reads “FILL” and/or “Amount To Start,” or “FILL” and/or “FrEE.” Close the Program Switch (PSC). The L.E.D. display will now read the temperature in the dryer (i.e., 72° F [22° C]). From this point, any of the 17 program locations can be accessed by pressing the “PERM PRESS” key once, at which time the L.E.D. display will read “**PL01**.”

To alter programming, the operator must first locate the program location or parameter to be changed. To advance to the specific program location press the “HI TEMP” key until the desired program location is displayed (i.e., **PL01**, **PL02**, etc.). The “LO TEMP” key will advance the program locations downward (i.e., **PL11**, **PL10**, etc.). Once the correct program location is displayed and access to change is desired, press the “PERM PRESS” key. The “PERM PRESS” key provides two (2) functions:

1. Allows access into a Program Location (PL).
2. Advances to next bit (part of a program location) or next location.

**NOTE:** When in a Program Location (PL) and the “PERM PRESS” key is pressed, whatever parameter is displayed **will be** stored in the computer’s memory and the programming is now advanced to the next step (bit) or program location.

The “HI TEMP” or “LO TEMP” keys provide the following functions:

1. Change numeric values...“HI TEMP” increases and “LO TEMP” decreases.
2. Flip-flop for status changes...by pressing either key, a status will revert back and forth no matter which of the two (2) keys is pressed.

If the change to be made is a numerical one (i.e., time or temperature), the operator must now press the “HI TEMP” key to increase the number value, or press the “LO TEMP” key to lower/increase the number value. Pressing the “PERM PRESS” key will store the change and advance to the next step (bit) or program location.

**NOTE:** To accelerate increase/upward value, press and hold in “HI TEMP” key. To accelerate decrease/downward value, press and hold in “LO TEMP” key.

**NOTE :** When making numerical changes, please keep in mind to stay within the programming limits shown.

If the change to be made is a status change (i.e., to change from °FAR to °CEL) simply press the “HI TEMP” or “LO TEMP” key and the light emitting diode (L.E.D.) display will revert back and forth between status choices (i.e. “Grd” and “nGrd”). Once the correct status is displayed, pressing the “PERM PRESS” key will store the change and advance to the next step (bit) or program location.

Once the change or changes desired are made, to exit program mode flip up (open) the Program Switch (PS).

**NOTE:** You can exit the programming mode at any time (even if you are in the middle of a program location) by simply opening the Program Switch (PS). However, if a change was made be sure the “PERM PRESS” key is pressed before opening the Program Switch (PS) to insure the change was stored in the computer’s memory.

## B. PROGRAMMING (FLOWCHARTS)

This section explains the programming through the use of flowcharts. A flowchart is nothing more than a diagram of the programming process.



Represents the microprocessor L.E.D. display. For example, if the flowchart shows the symbol “FILL,” the computer L.E.D. display will read the same.




Represents the key on the label that is to be pressed. For example, if flowchart shows “HI TEMP,” you would press that key on the label.



Represents the program path.

On the side of each flowchart is an explanation of the chart procedures, in some cases, the programming limits.

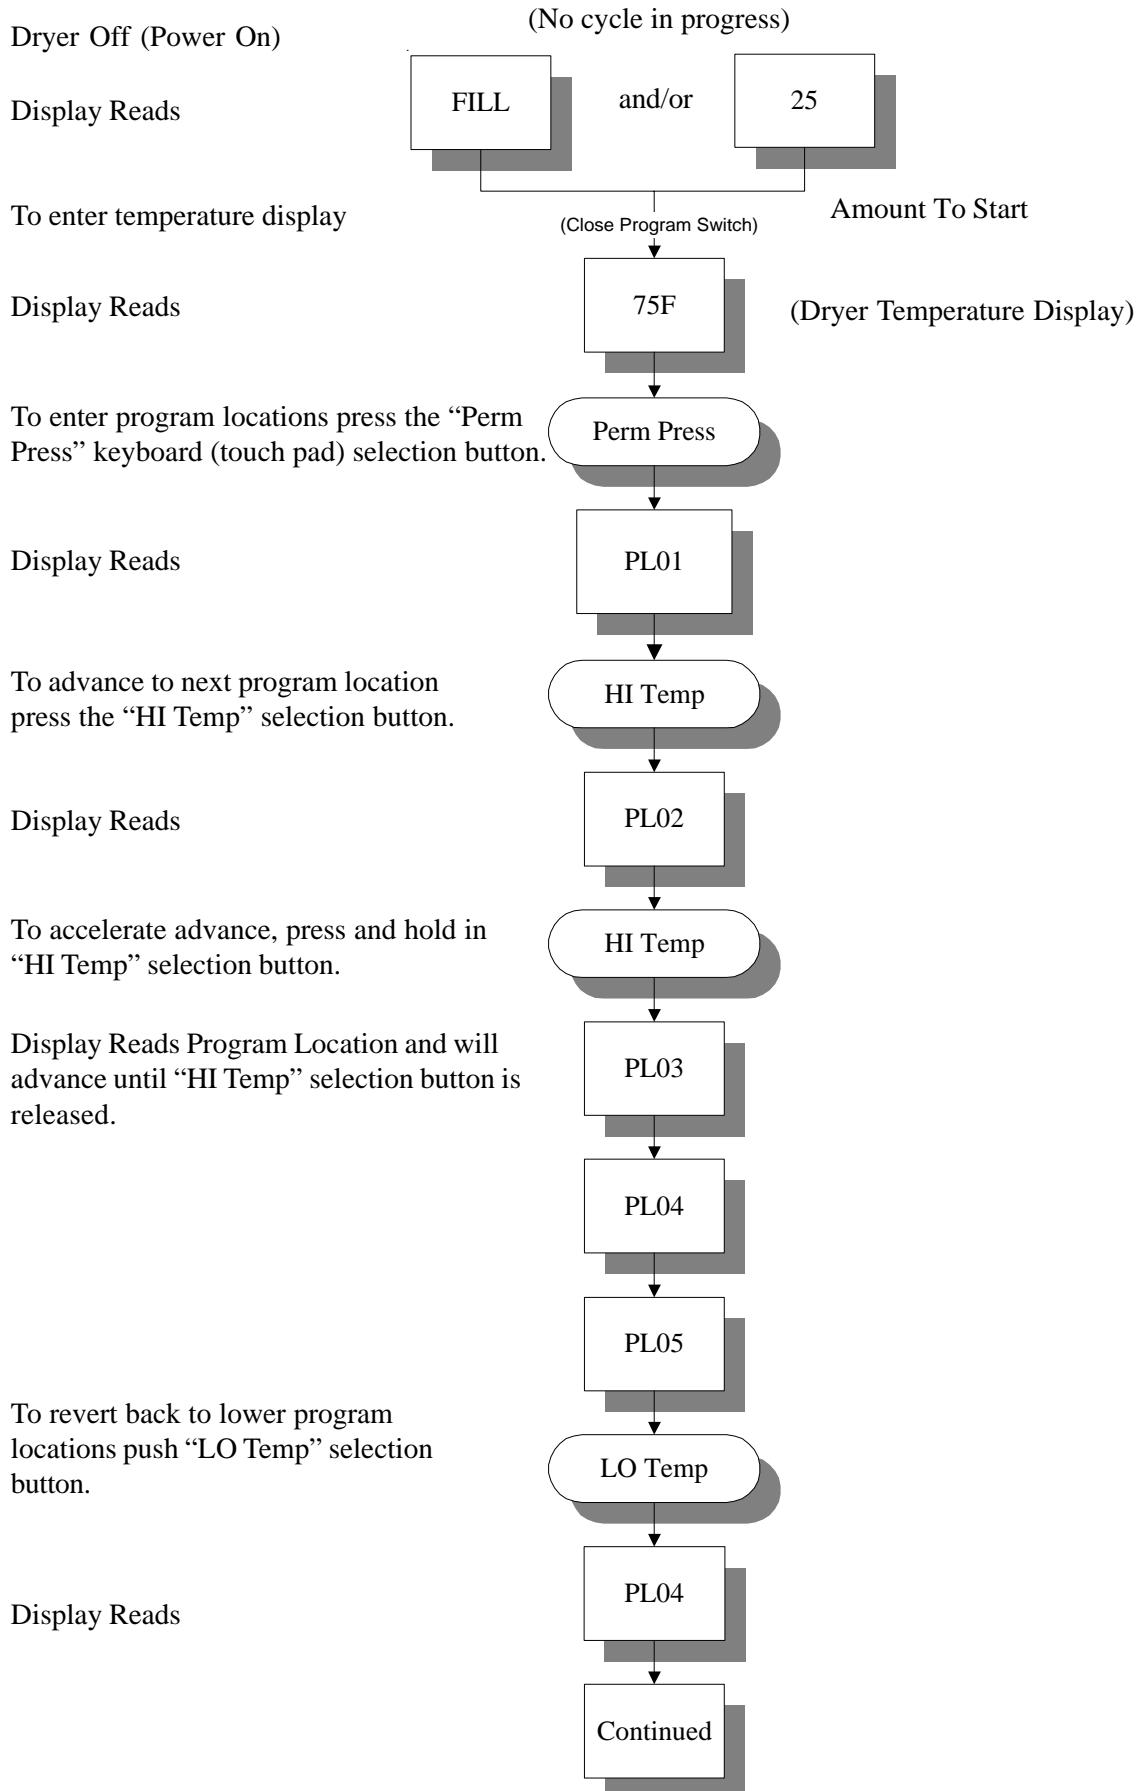

To accelerate press and hold in “LO Temp” selection button.

Display reads program locations and will advance downward until “LO Temp” selection button is released.

To enter a specific program location (i.e. PL01) push the “Perm Press” selection button.

Display will read specific program location called up.

To exit program mode, open program switch. Display reads.

Continued

LO Temp

PL03

PL02

PL01

Perm Press

°FAr

(Example)

FILL


25

and/or


# SECTION VI

## PROGRAMMING


### A. TEMPERATURE DISPLAY MODE

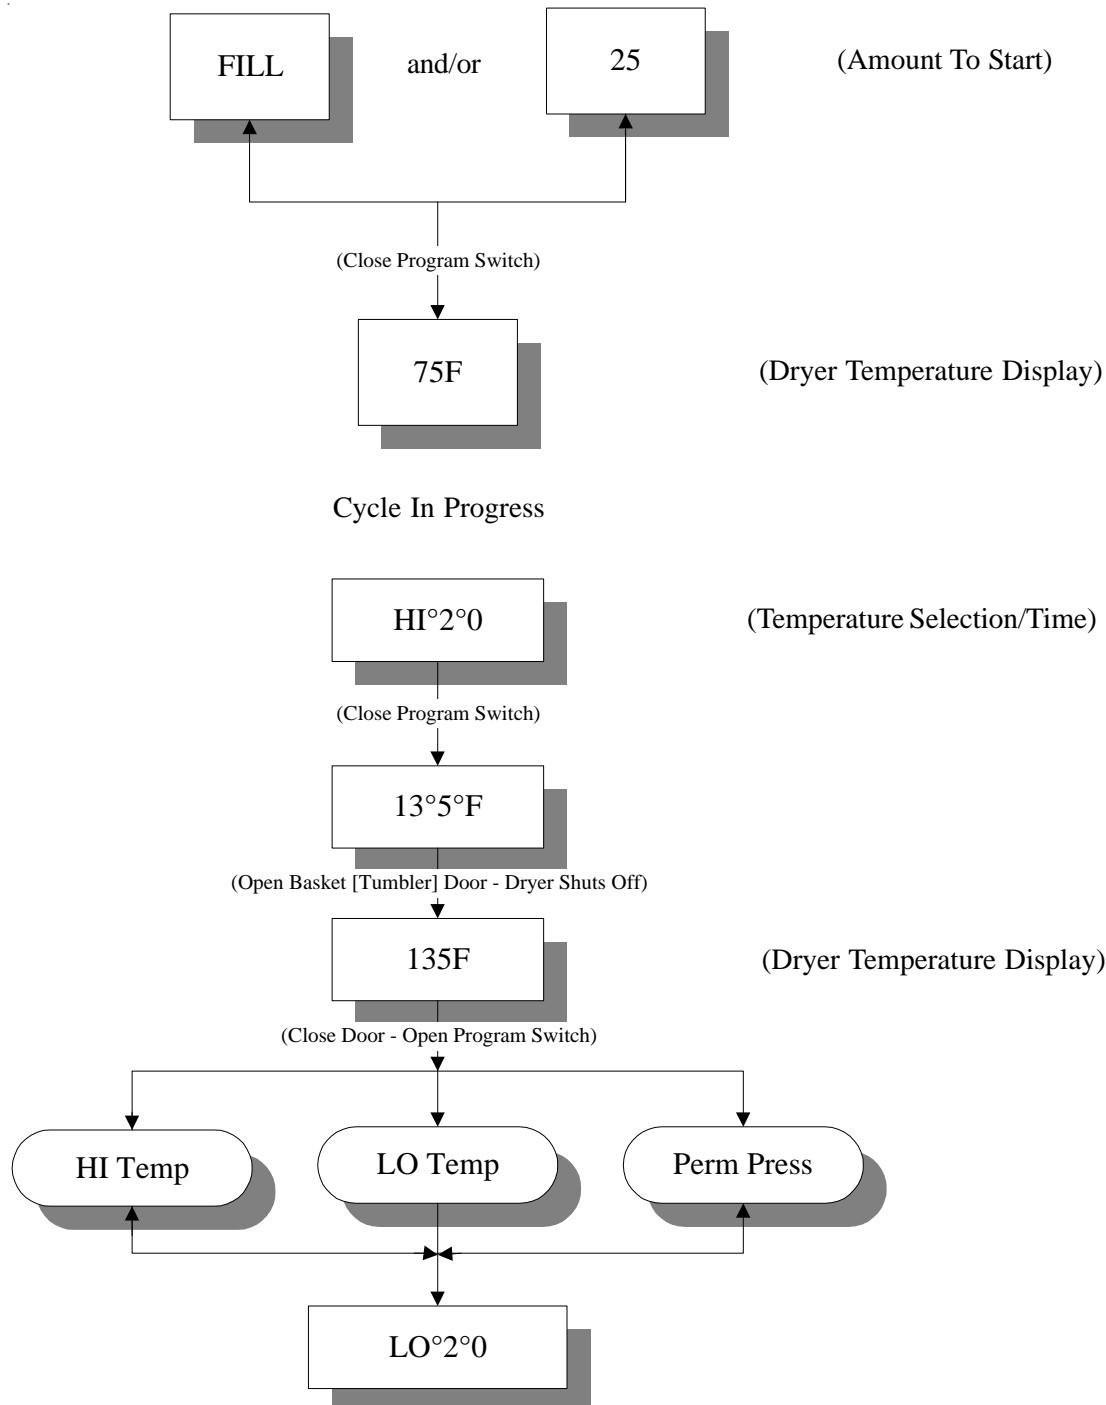


## B. LEFT COIN COUNT

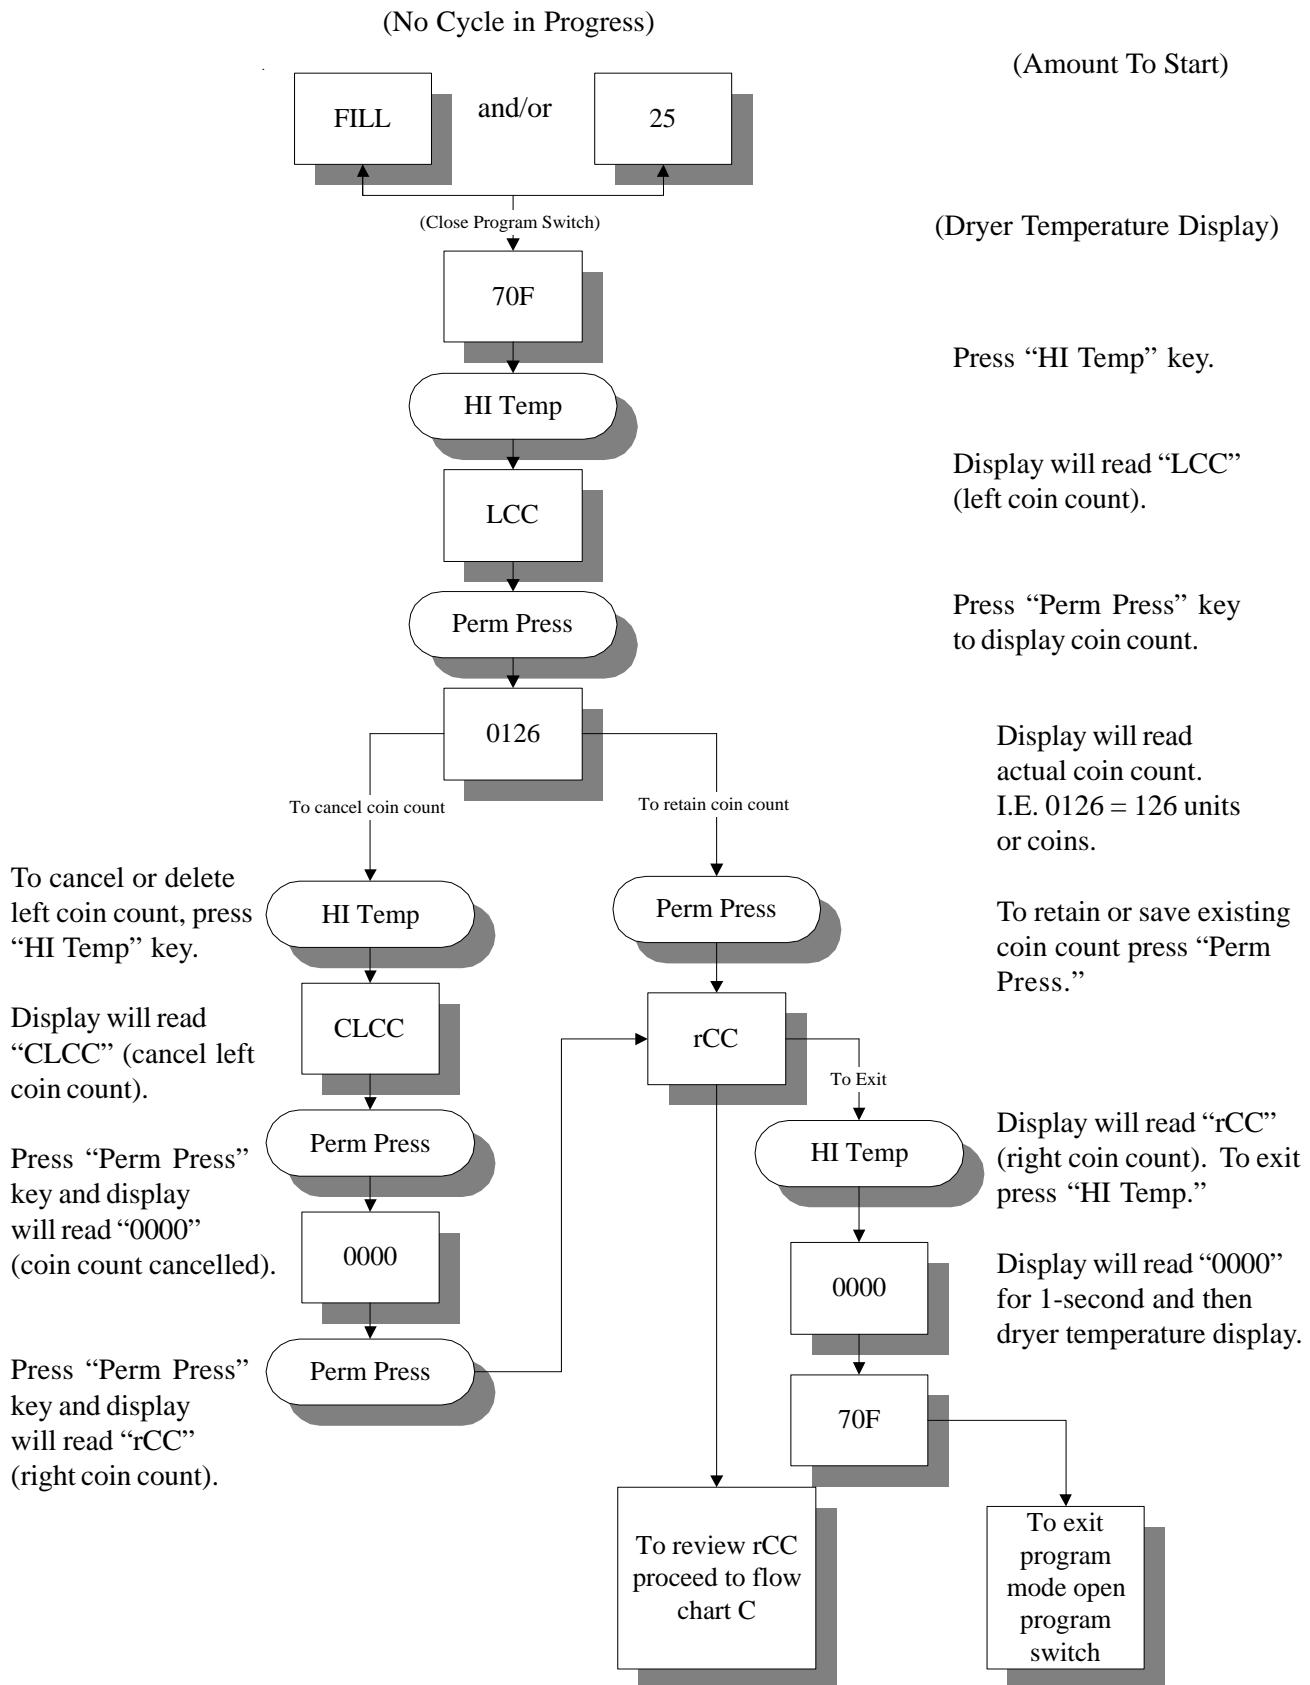


## C. RIGHT COIN COUNT

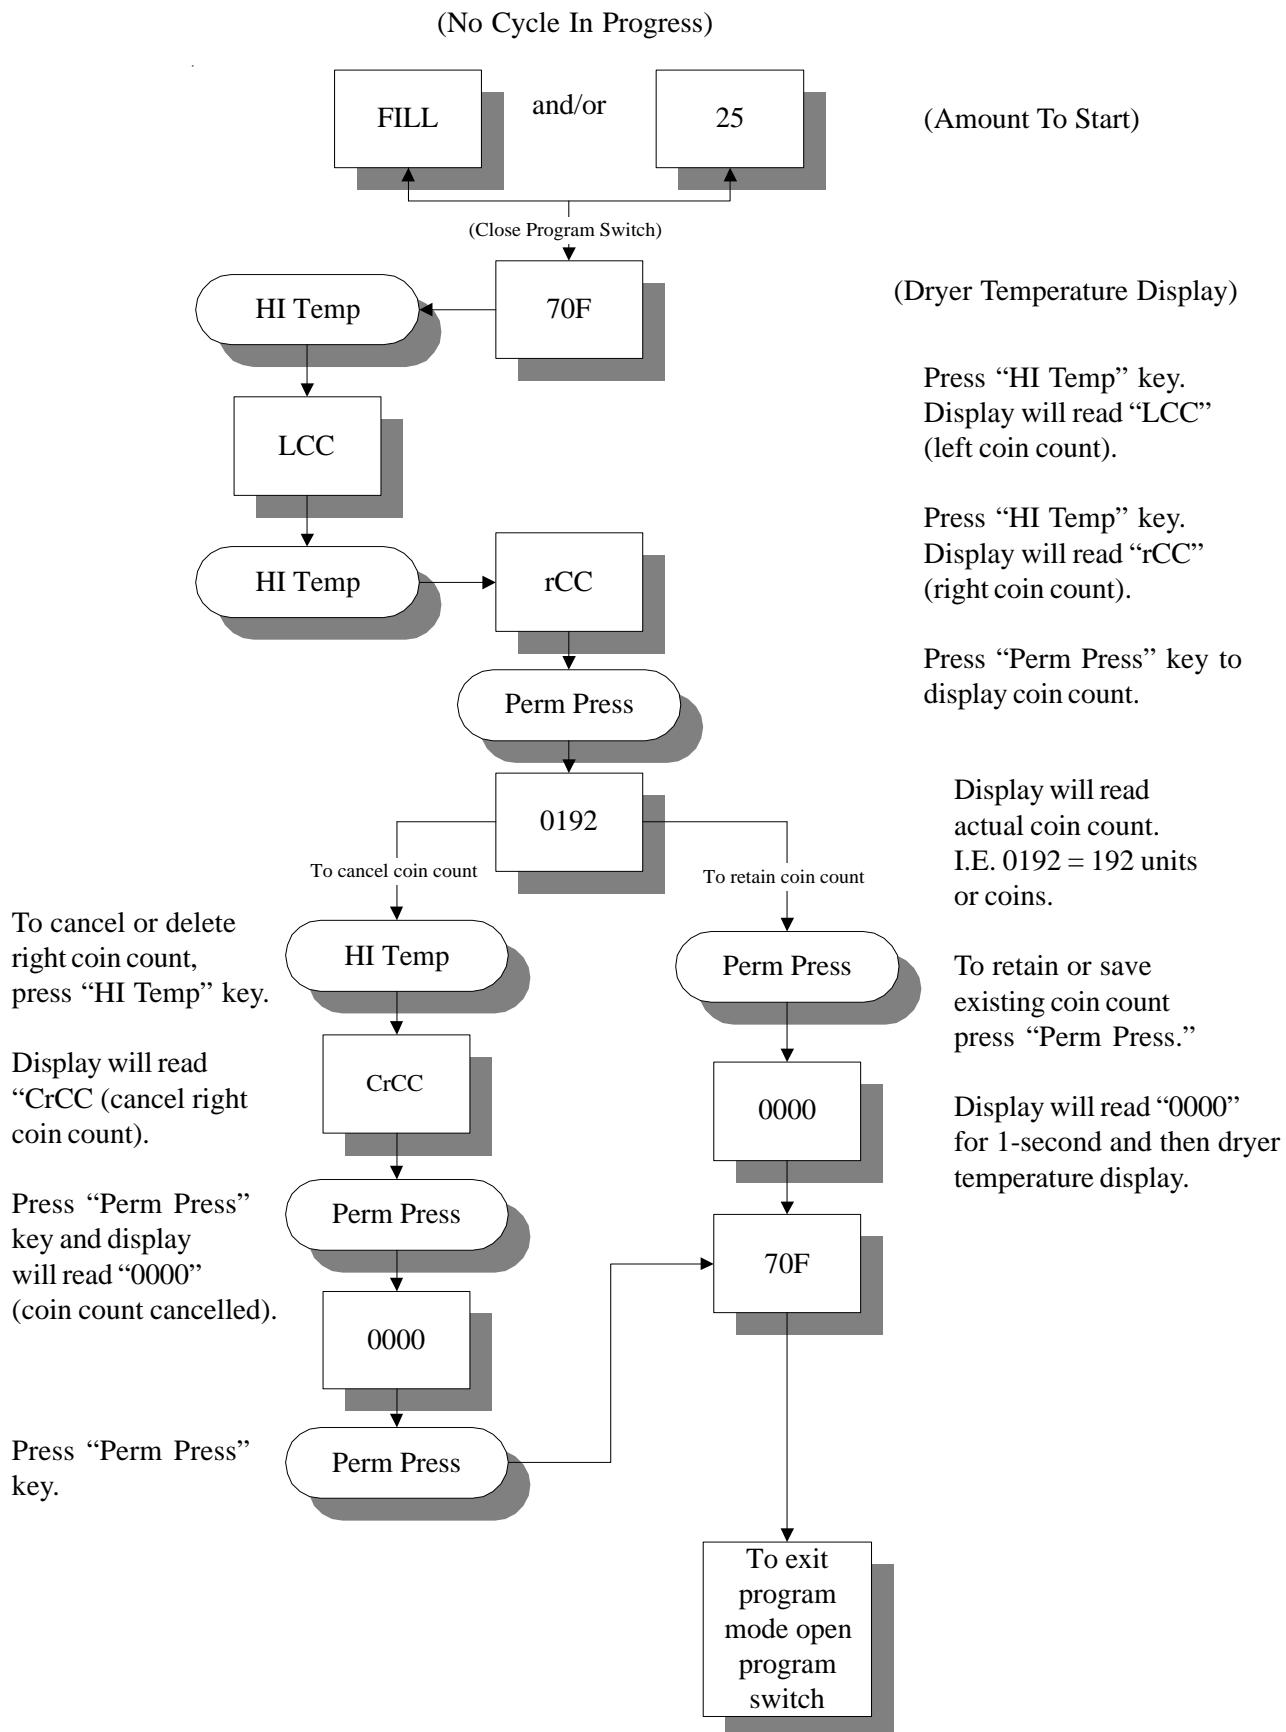


## D. PROGRAM LOCATION 01 (PL01)

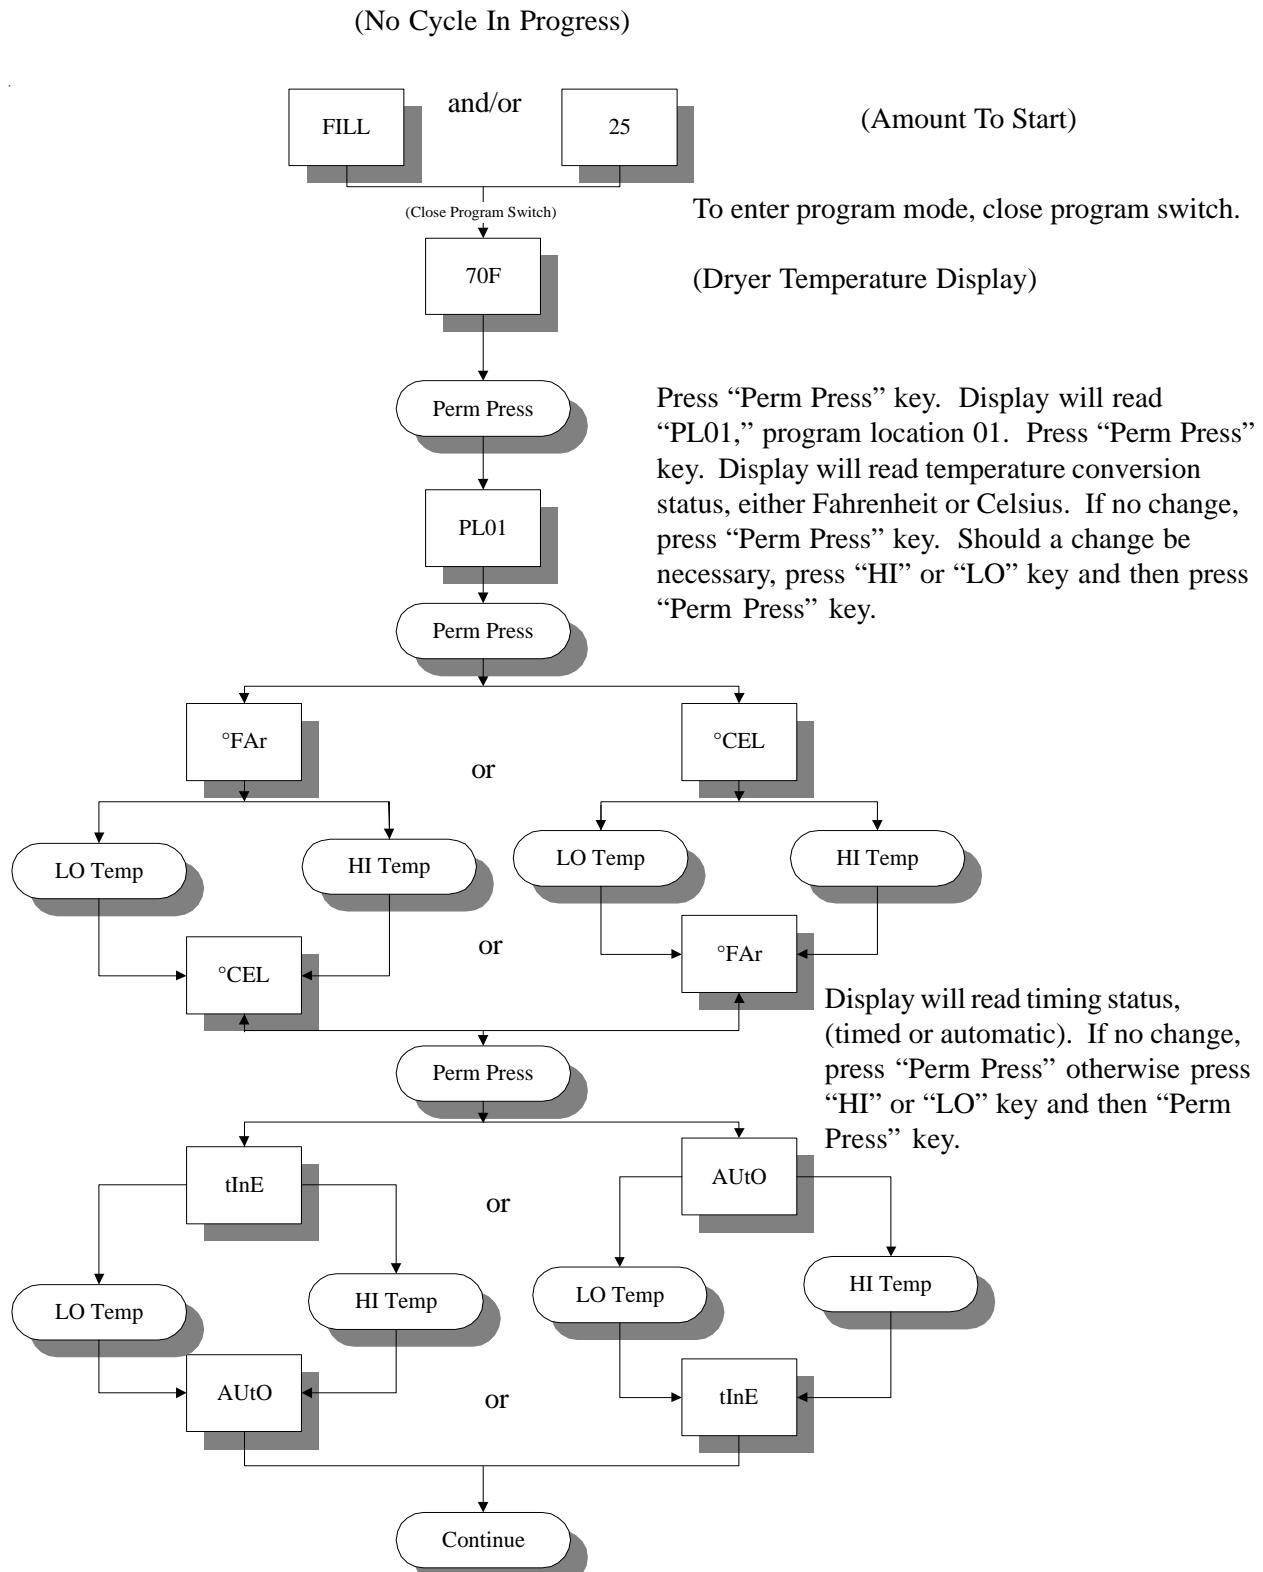

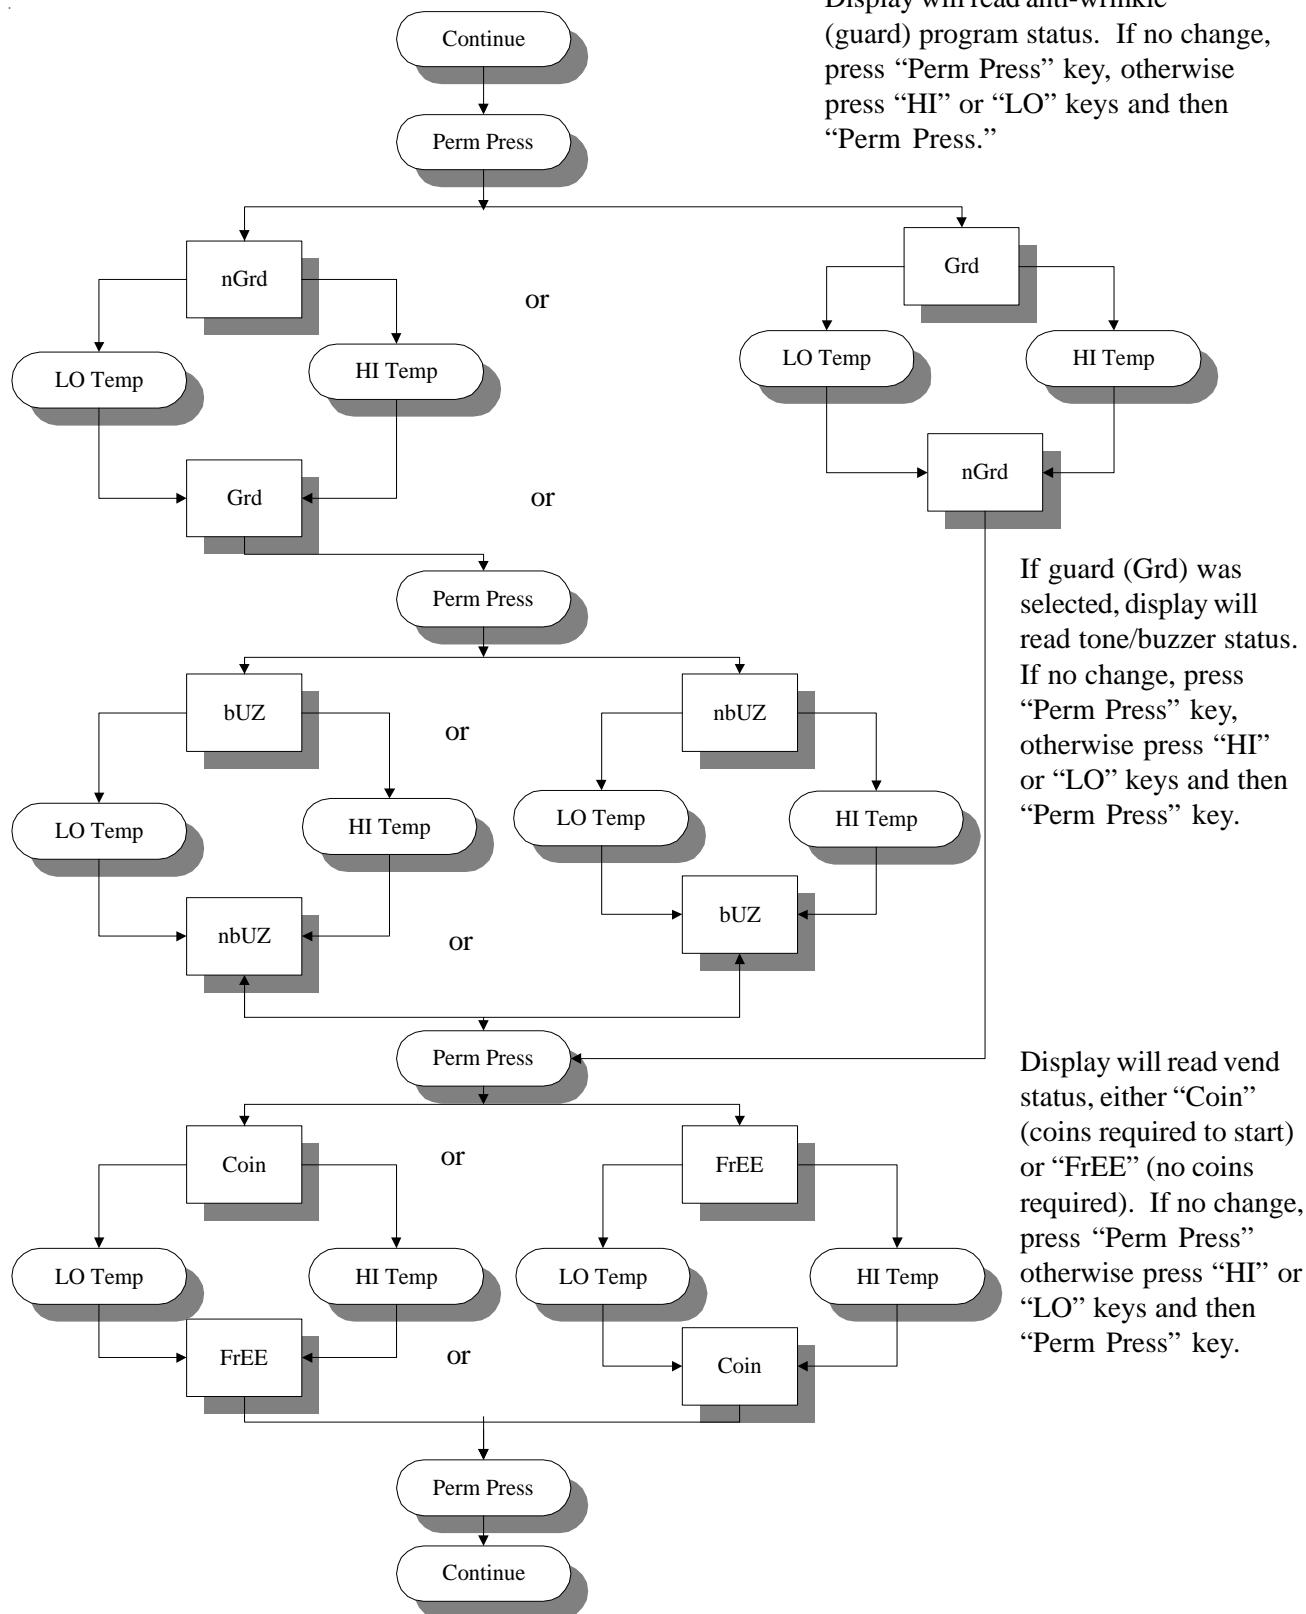


Display will read light emitting diode (L.E.D.) display status. Either no flash (nFLS) or flash (FLS). If no change, press “Perm Press” key, otherwise press “HI” or “LO” keys and then “Perm Press” keys.

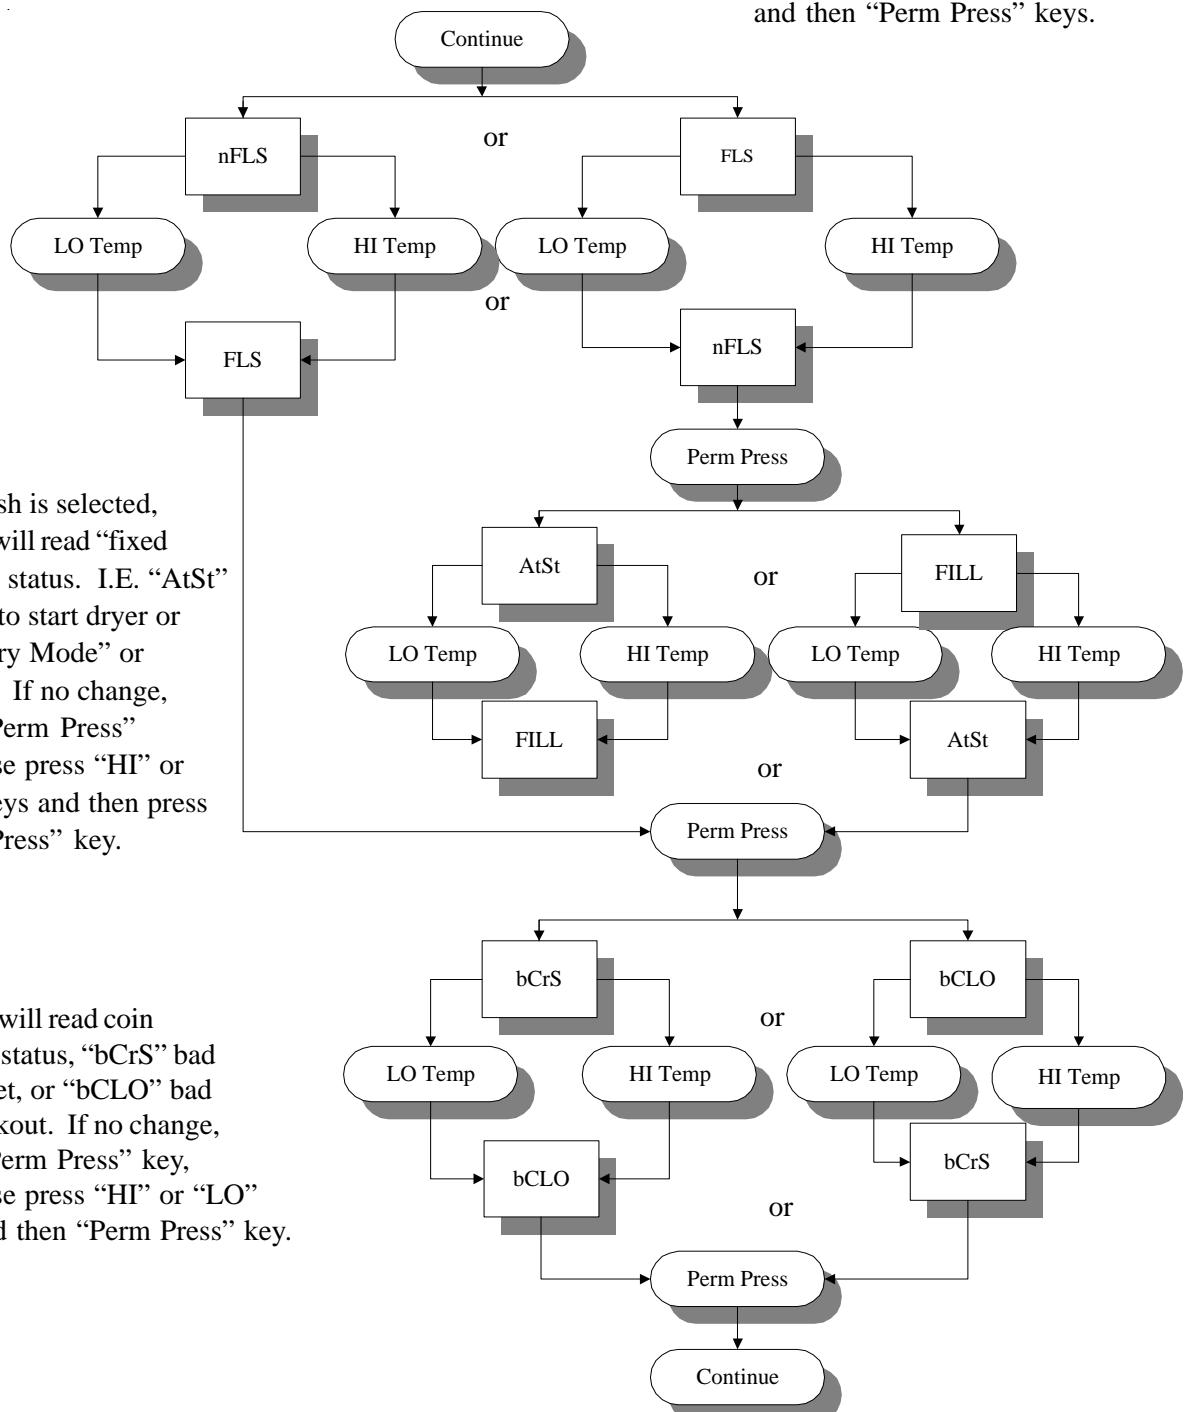

If no flash is selected, display will read “fixed display” status. I.E. “AtSt” amount to start dryer or “Free Dry Mode” or “FILL.” If no change, press “Perm Press” otherwise press “HI” or “LO” keys and then press “Perm Press” key.

Display will read coin monitor status, “bCrS” bad coin reset, or “bCLO” bad coin lockout. If no change, press “Perm Press” key, otherwise press “HI” or “LO” keys and then “Perm Press” key.

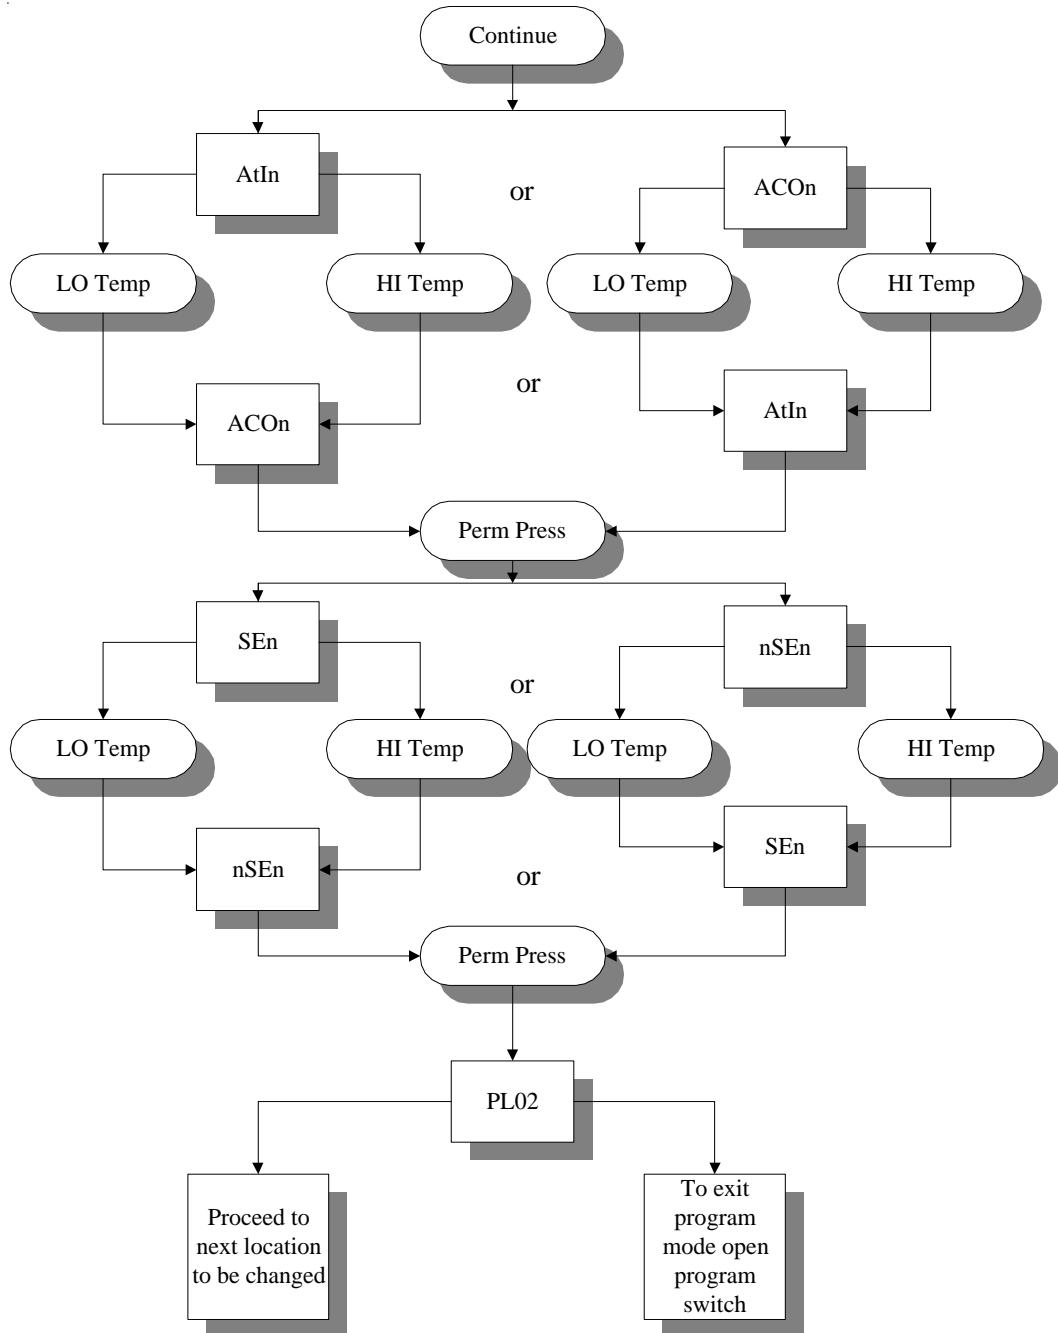


Display will read coin/time accumulation status. I.E. "AtIn" accumulative time or "ACOn" accumulative coin. If no change, press "Perm Press" key, otherwise press "HI" or "LO" keys and then press "Perm Press" key.

Display will read basket rotational sensor status. "SEn" sensor active or "nSEn" sensor not active. If no change, press "Perm Press" key, otherwise press "HI" or "LO" keys and then press "Perm Press" key.

## E. PROGRAM LOCATION 02 (PL02)


Percent Dry from 90 to 100%

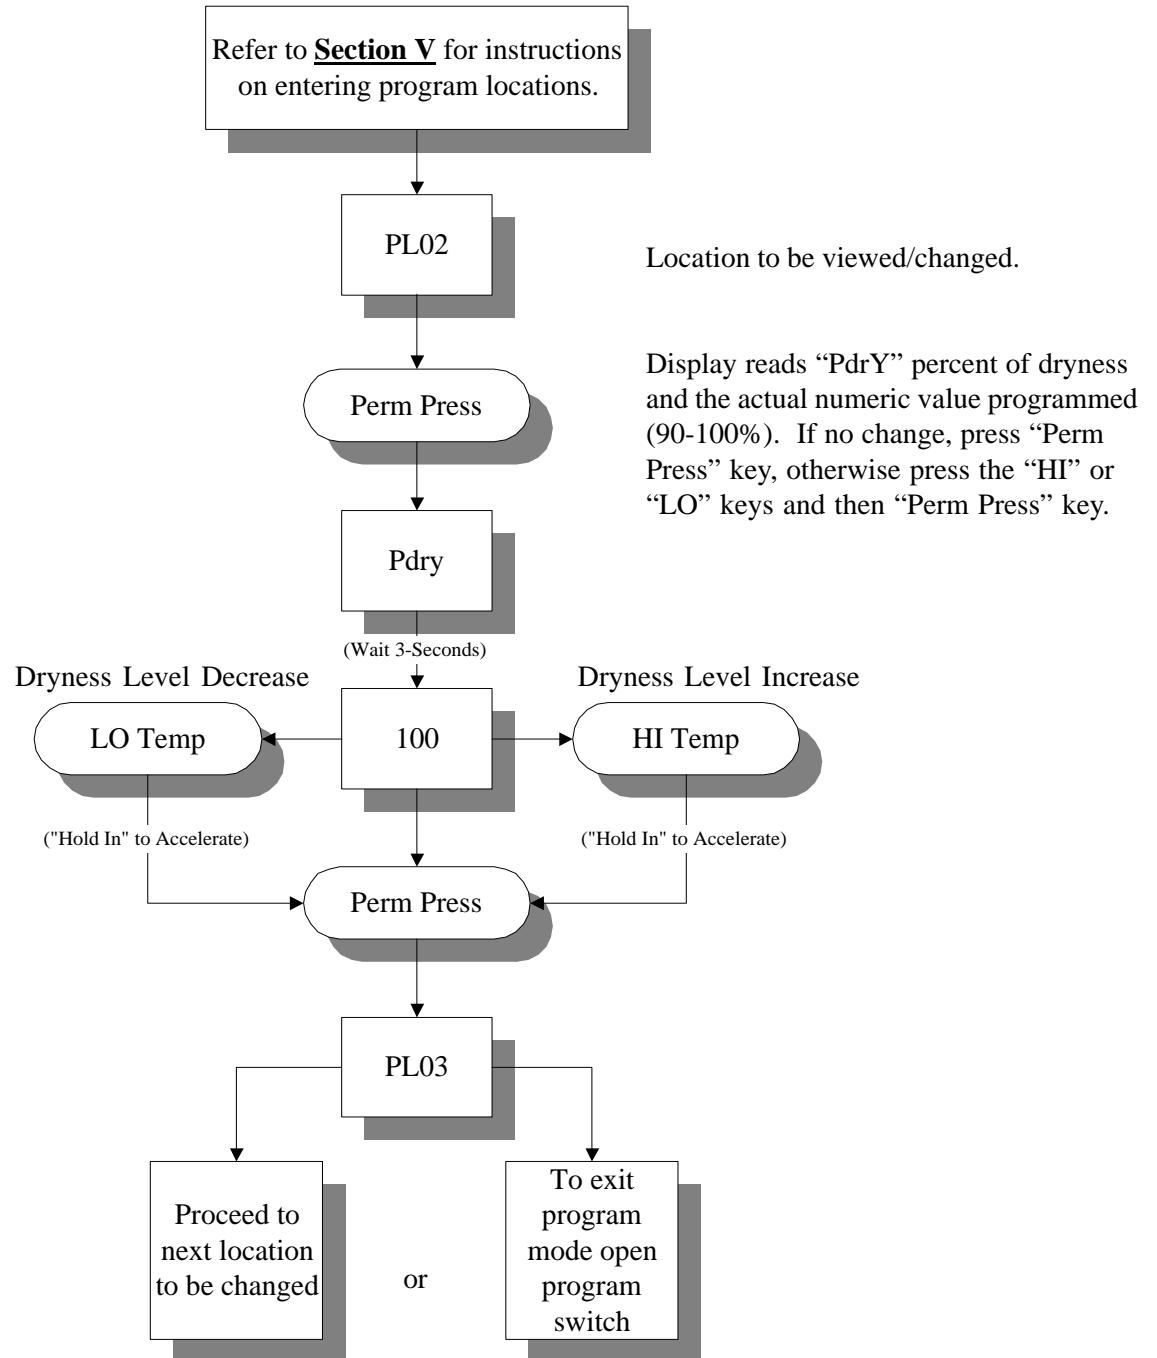

Summary: The percentage of dryness is programmable from a minimum of ninety percent (90%) to a maximum of one hundred percent (100%).

## F. PROGRAM LOCATION 03 (PL03)


HI Temp

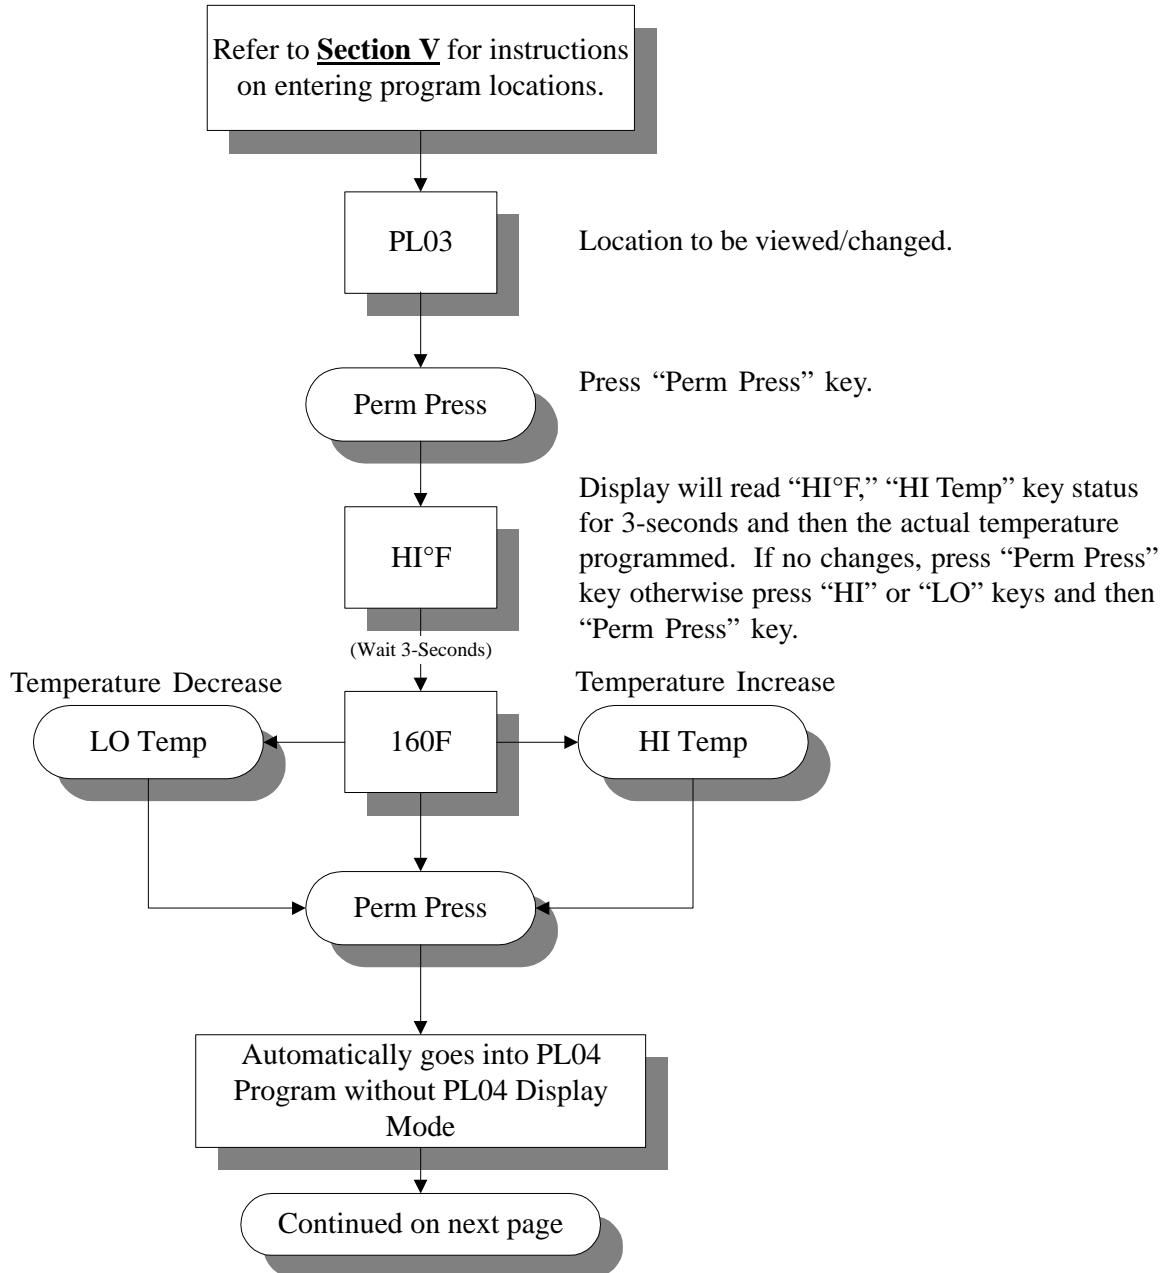

**Summary:** The high (HI) operating temperature is programmable from a minimum of 100° F to a maximum of 160° F in ten-degree increments or from a minimum of 38° C to a maximum of 71° C in five-degree increments.

## G. PROGRAM LOCATION 04 (PL04)

HI Temp Cool Down Temperature/Time

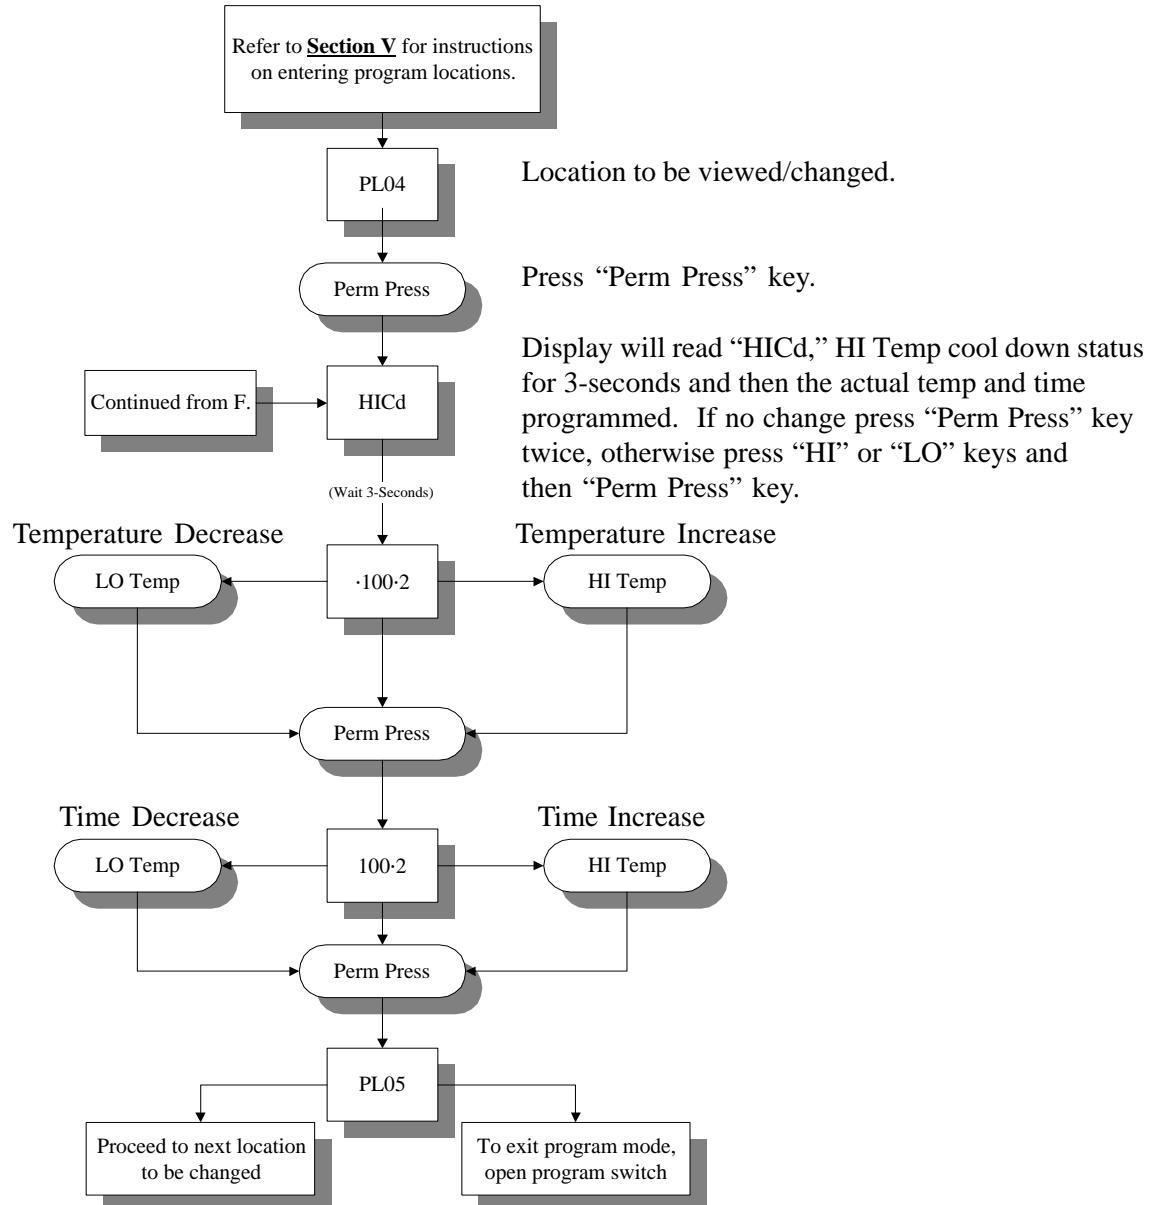


Summary: Cool down temperature is programmable from a minimum of 100° F to a maximum of 160° F in ten-degree increments or from a minimum of 38° C to a maximum of 71° C in five-degree increments.

Cool down time is programmable from 0 to 9 minutes.

## H. PROGRAM LOCATION 05 (PL05)


LO Temp

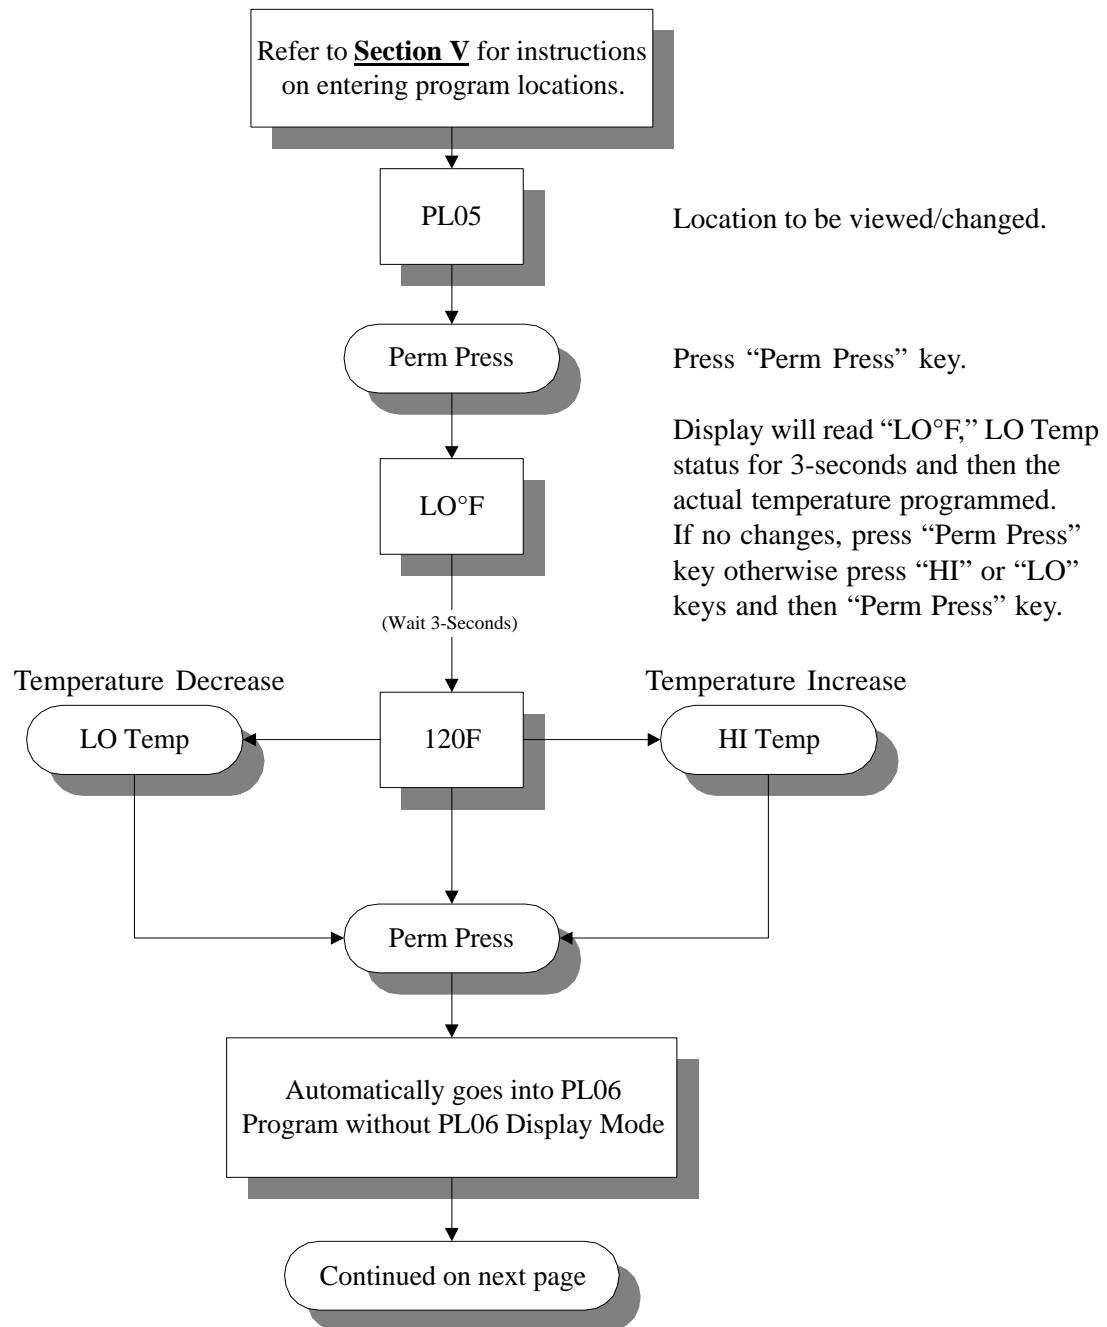

Summary: Low (LO) temperature is programmable from a minimum of 100° F to a maximum of 160° F in ten-degree increments or from a minimum of 38° C to a maximum of 71° C in five-degree increments.

## I. PROGRAM LOCATION 06 (PL06)

LO Temp Cool Down Temperature/Time

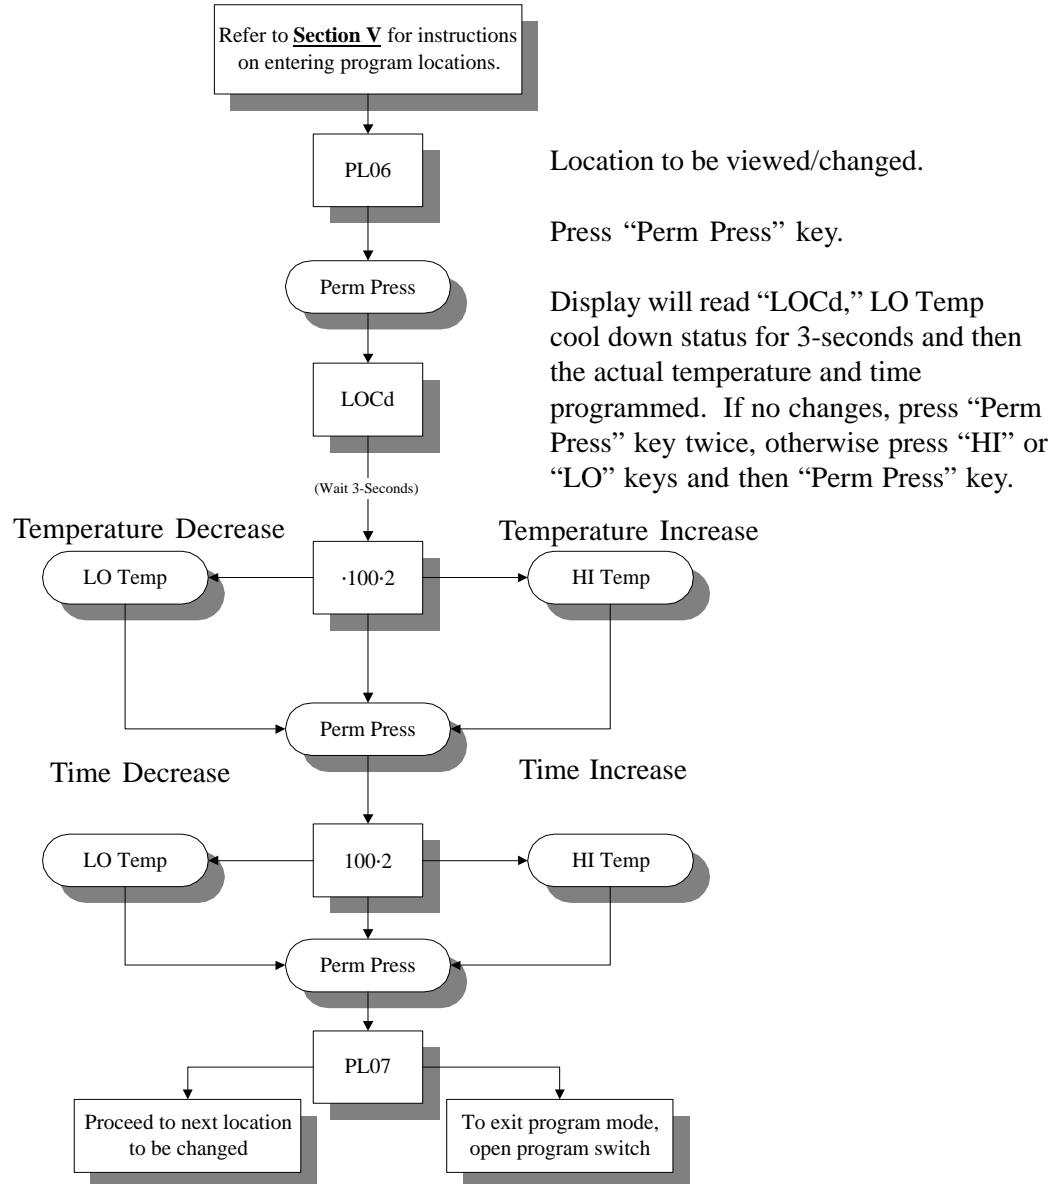


Summary: Cool down temperature is programmable from a minimum of 100° F to a maximum of 160° F in ten-degree increments or from a minimum of 38° C to a maximum of 71° C in five-degree increments.

Cool down time is programmable from 0 to 9 minutes.

## J. PROGRAM LOCATION 07 (PL07)


Perm Press Temp

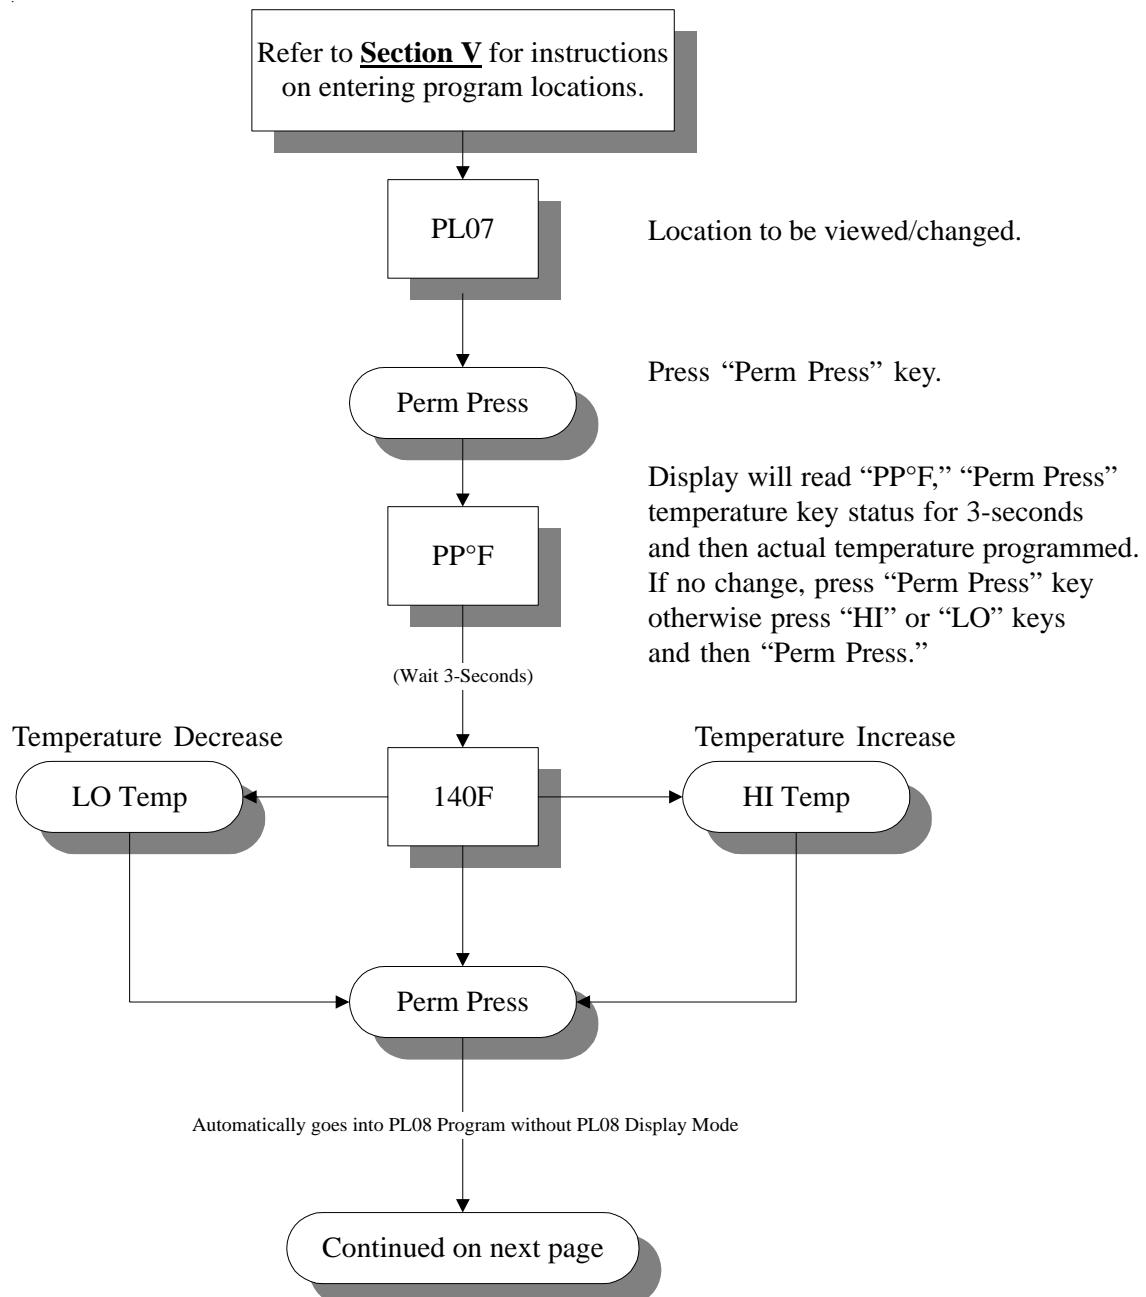

Summary: Perm press temperature is programmable from a minimum of 100° F to a maximum of 160° F in ten-degree increments or from a minimum of 38° C to a maximum of 71° C in five-degree increments.

## K. PROGRAM LOCATION 08 (PL08)

Perm Press Cool Down Temperature/Time

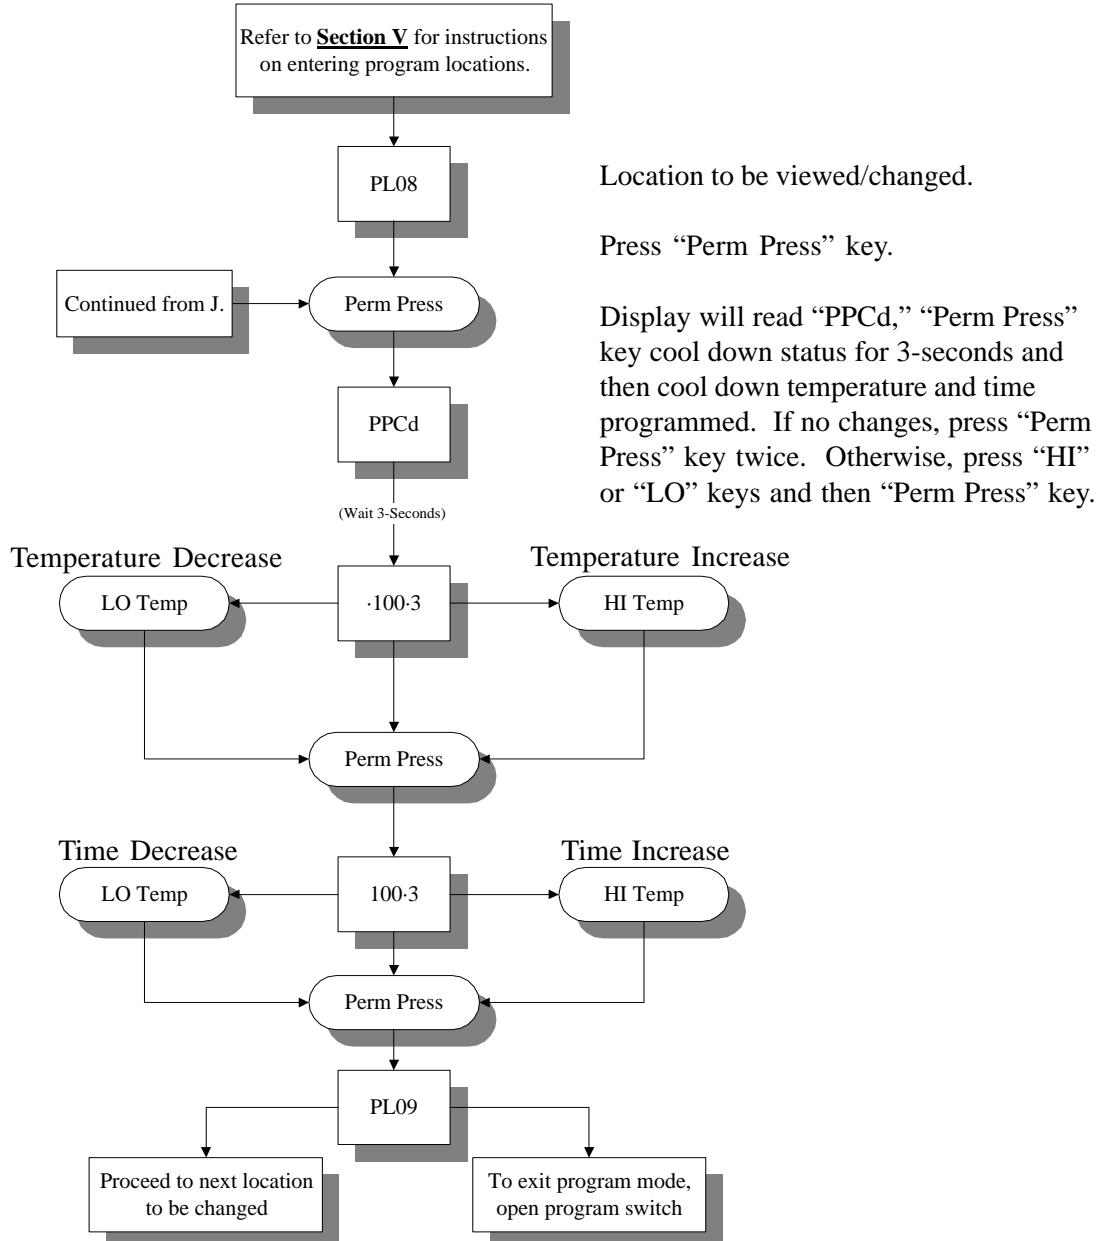


Summary: Cool down temperature is programmable from a minimum of 100° F to a maximum of 160° F in ten-degree increments or from a minimum of 38° C to a maximum of 71° C in five-degree increments.

Cool down is programmable from 0 to 9 minutes.

## L. PROGRAM LOCATION 09 (PL09)

Left Coin Denomination

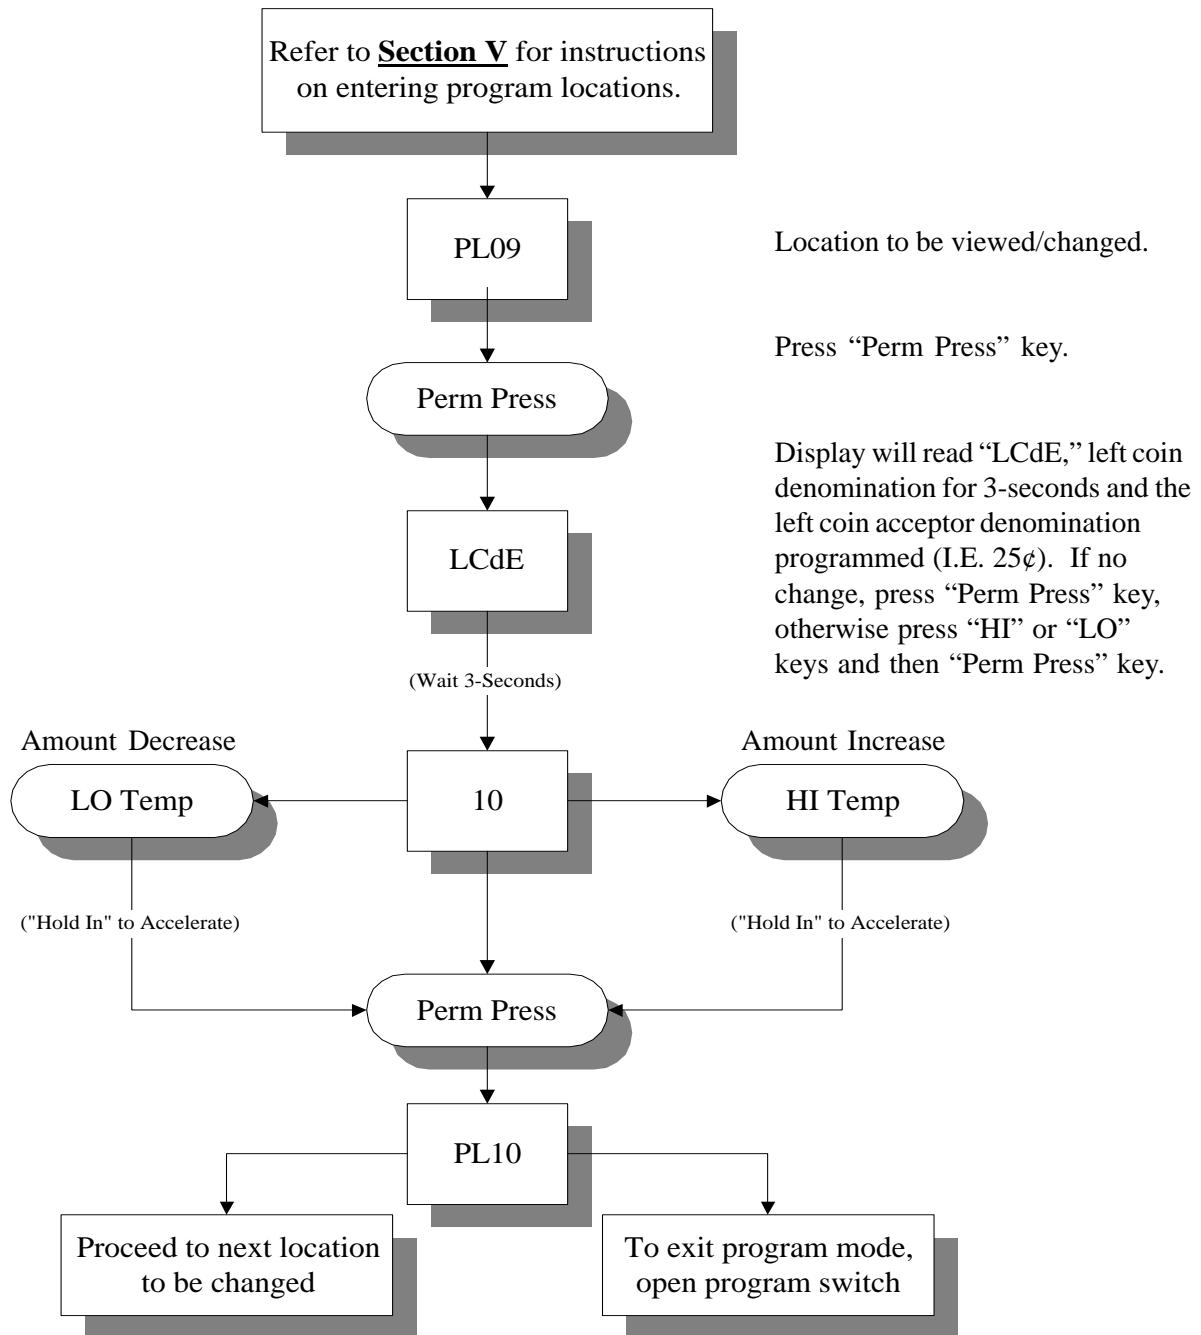


Summary: The left coin denomination is programmable from 1 to 9999.

**IMPORTANT:** When the dryer is equipped with a dual coin acceptor, the value set here is the lower value denomination which **is not** necessarily the left coin portion of the acceptor.

**NOTE:** For single coin models this parameter **must be** set for the value of the acceptor. I.E. 25¢ acceptor = 25.

## M. PROGRAM LOCATION 10 (PL10)

Right Coin Denomination

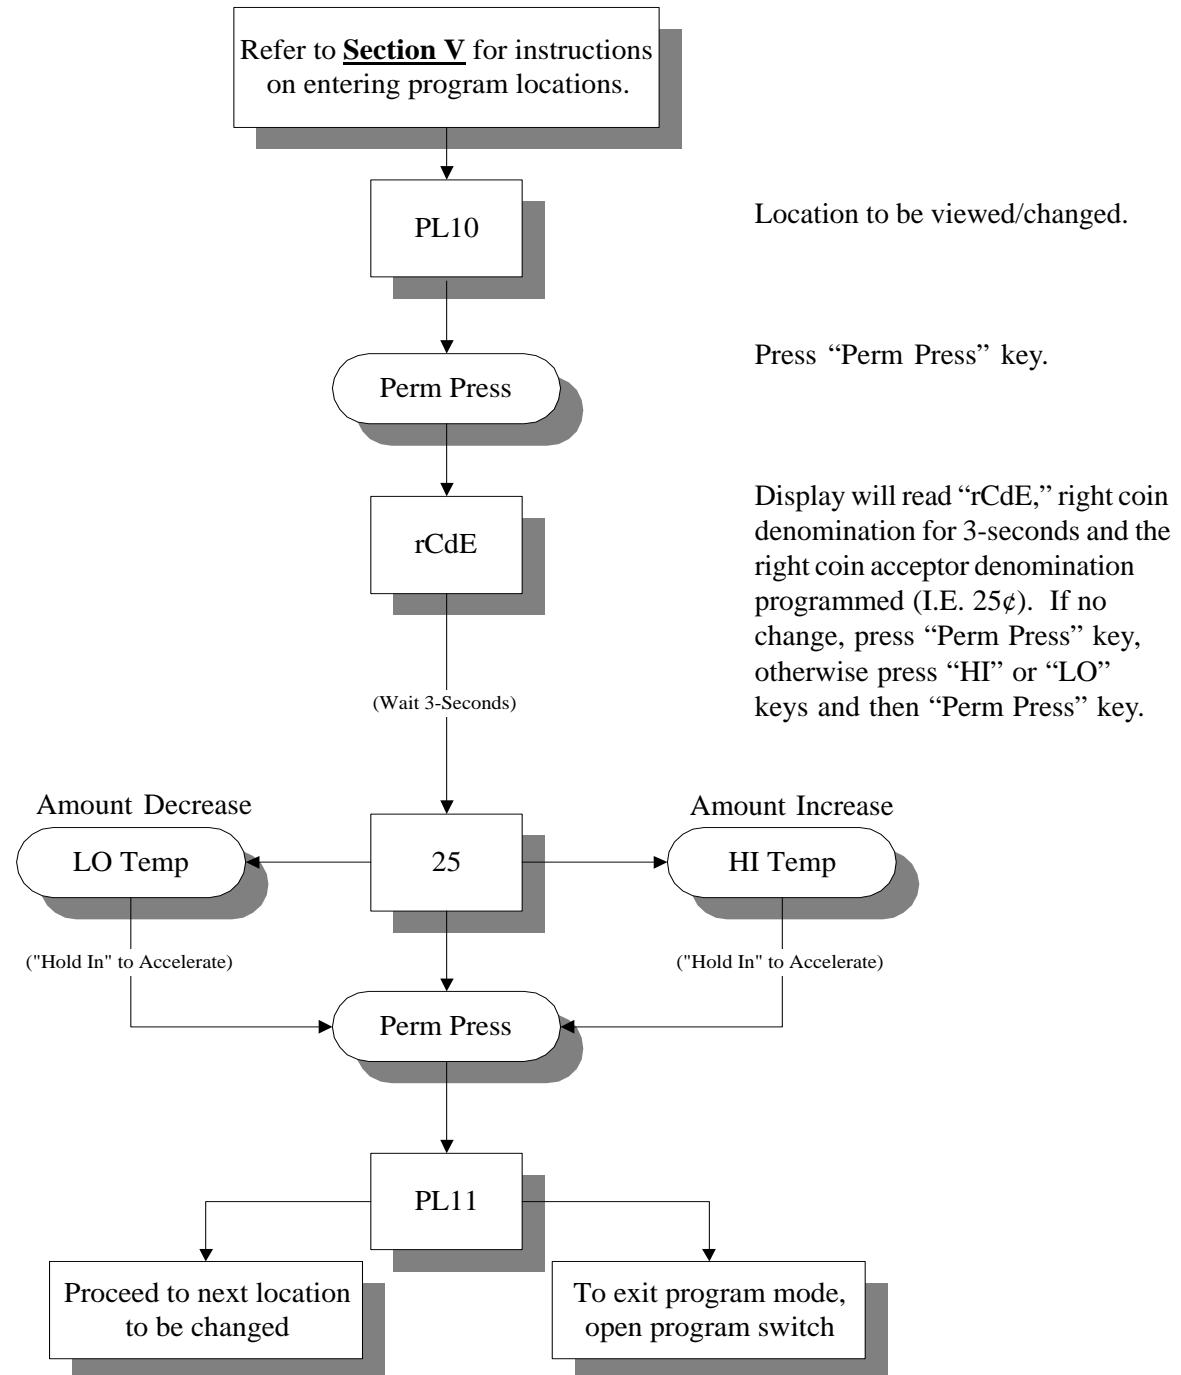


Summary: The right coin denomination is programmable from 1 to 9999.

**IMPORTANT:** When the dryer is equipped with a dual coin acceptor, the value set here is the higher value denomination which **is not** necessarily the right coin portion of the acceptor.

**NOTE:** For single coin models this parameter need not be set.

## N. PROGRAM LOCATION 11 (PL11)


Time For Amount To Start

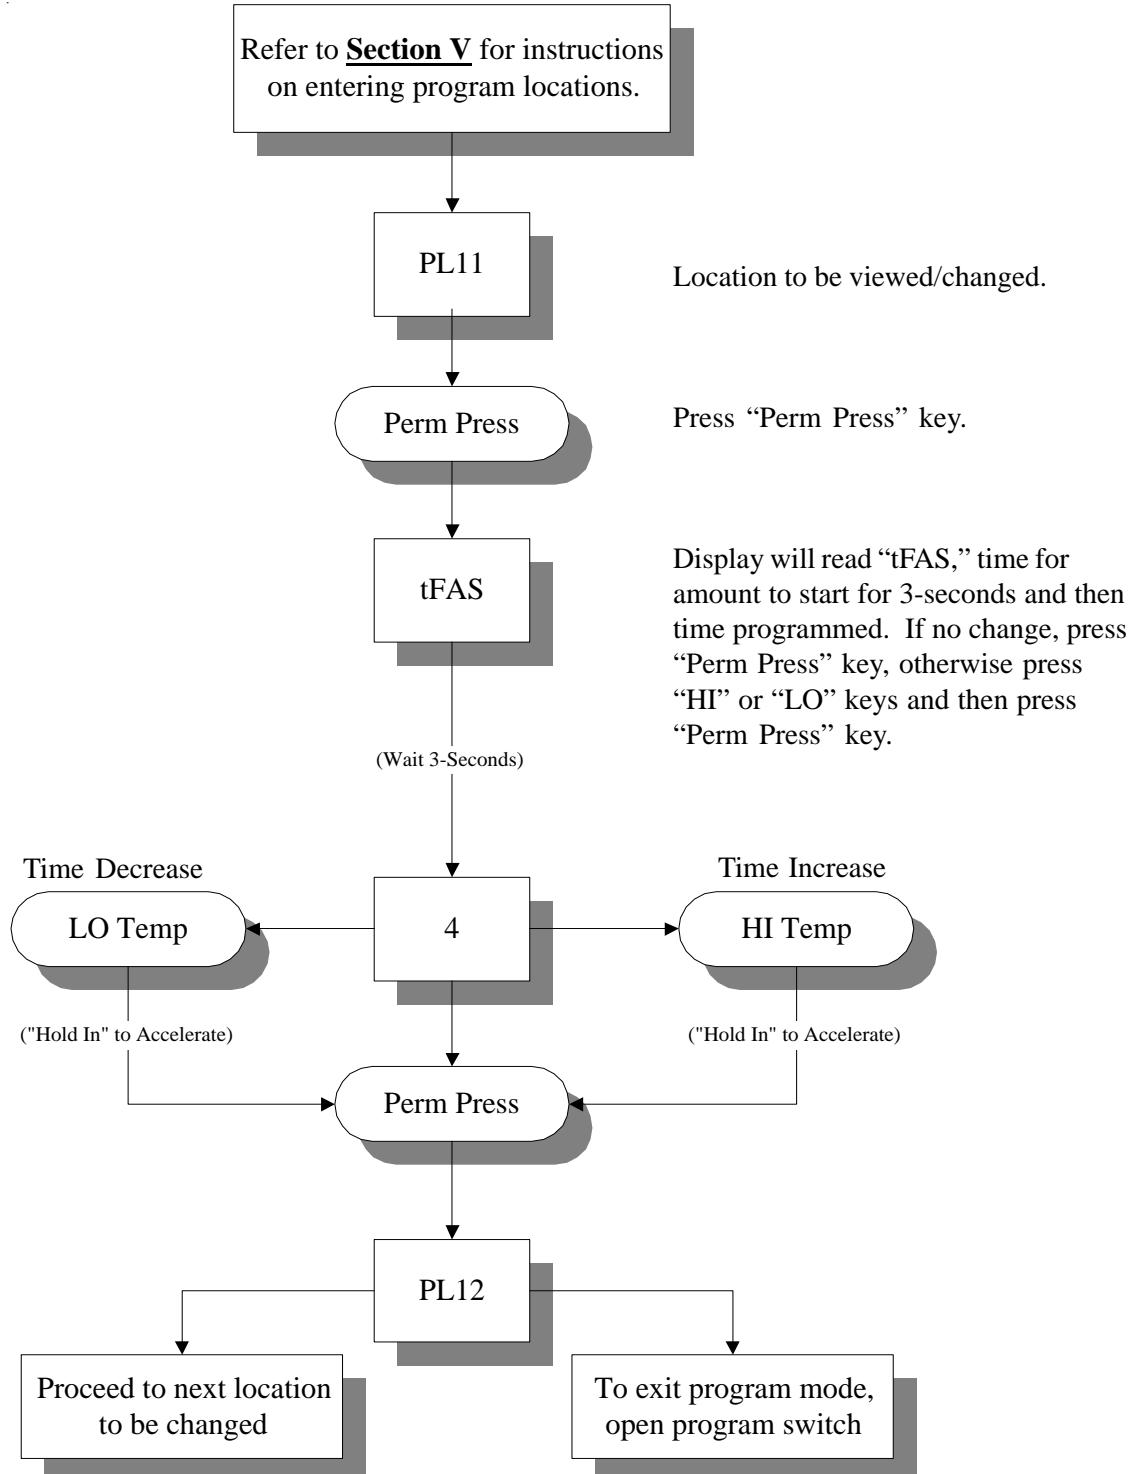

Summary: The time for amount to start is programmable from 1 to 99 minutes.

## O. PROGRAM LOCATION 12 (PL12)


Amount To Start

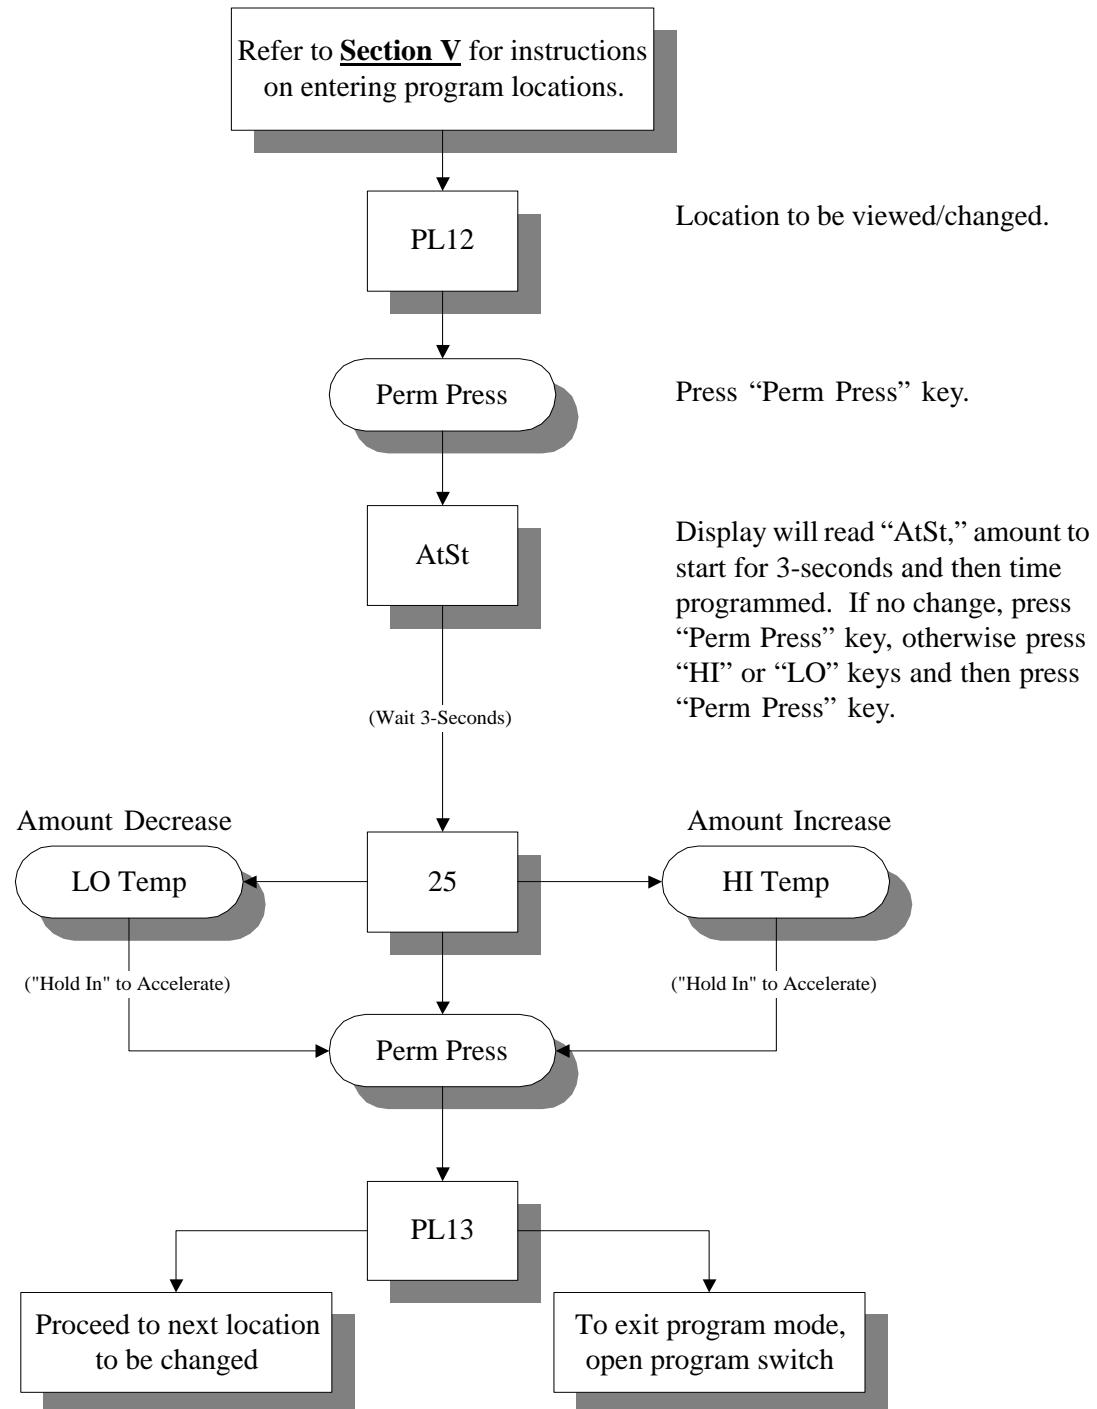

Summary: The amount to start is programmable from 1 to 9999.

## P. PROGRAM LOCATION 13 (PL13)


Coin Accumulation Minimum Amount For More Time

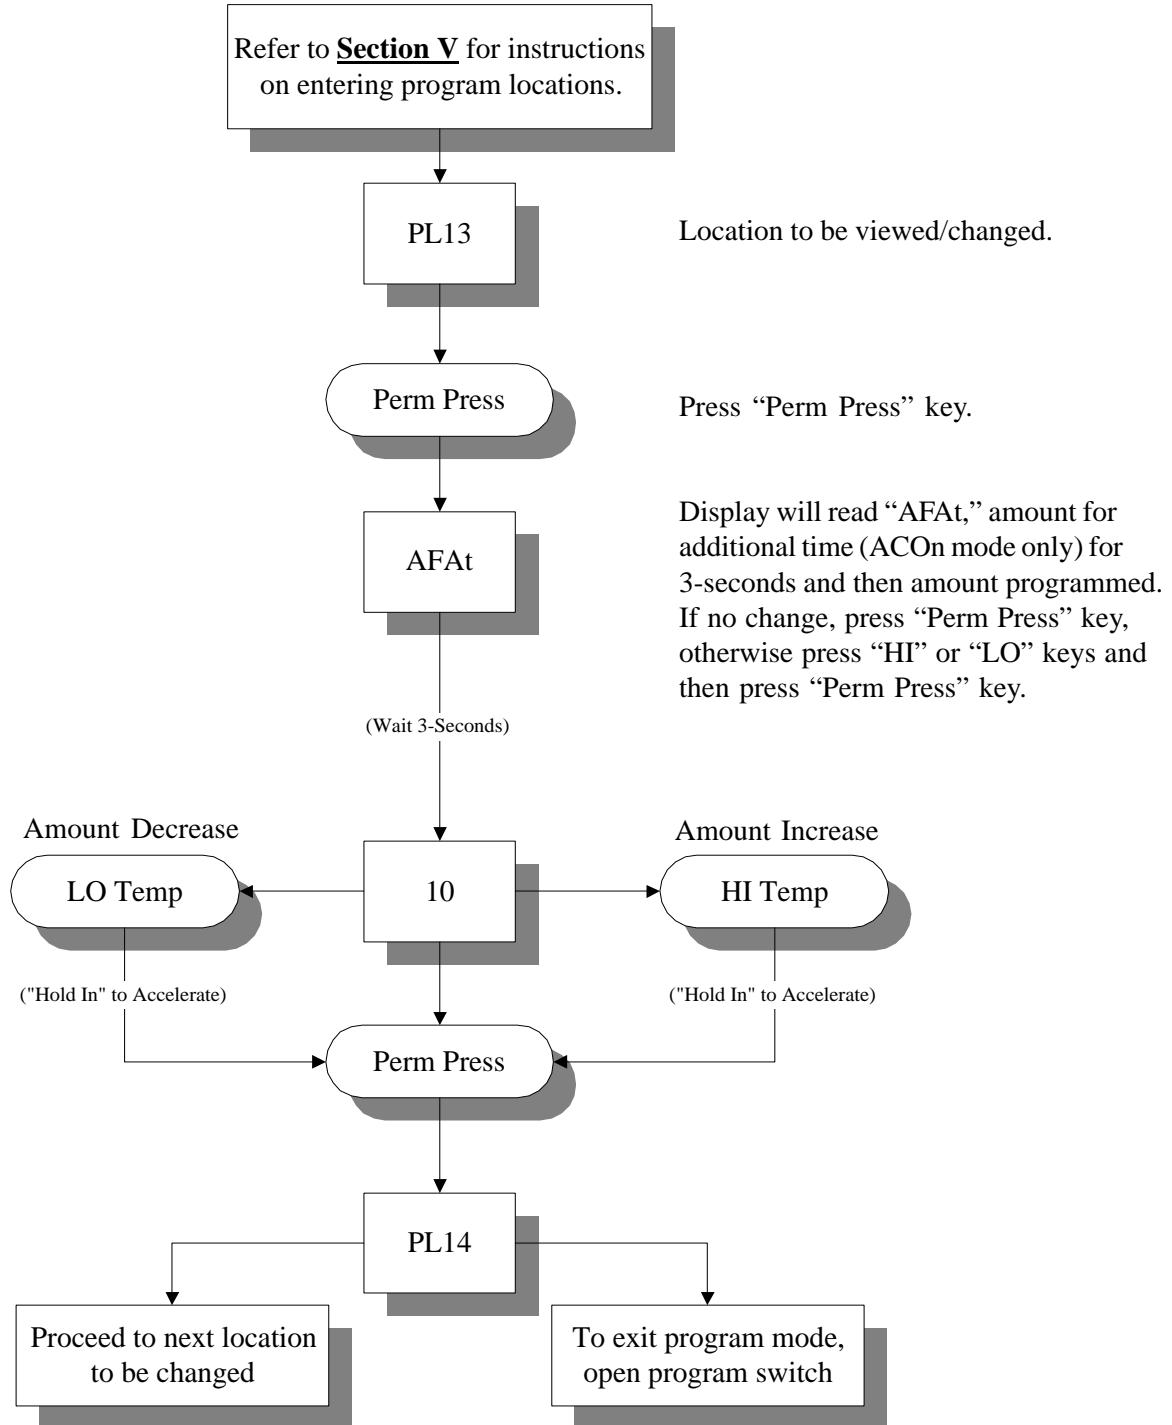

Summary: The amount to start is programmable from 1 to 9999.

## Q. PROGRAM LOCATION 14 (PL14)


Maximum Time for Auto Dry

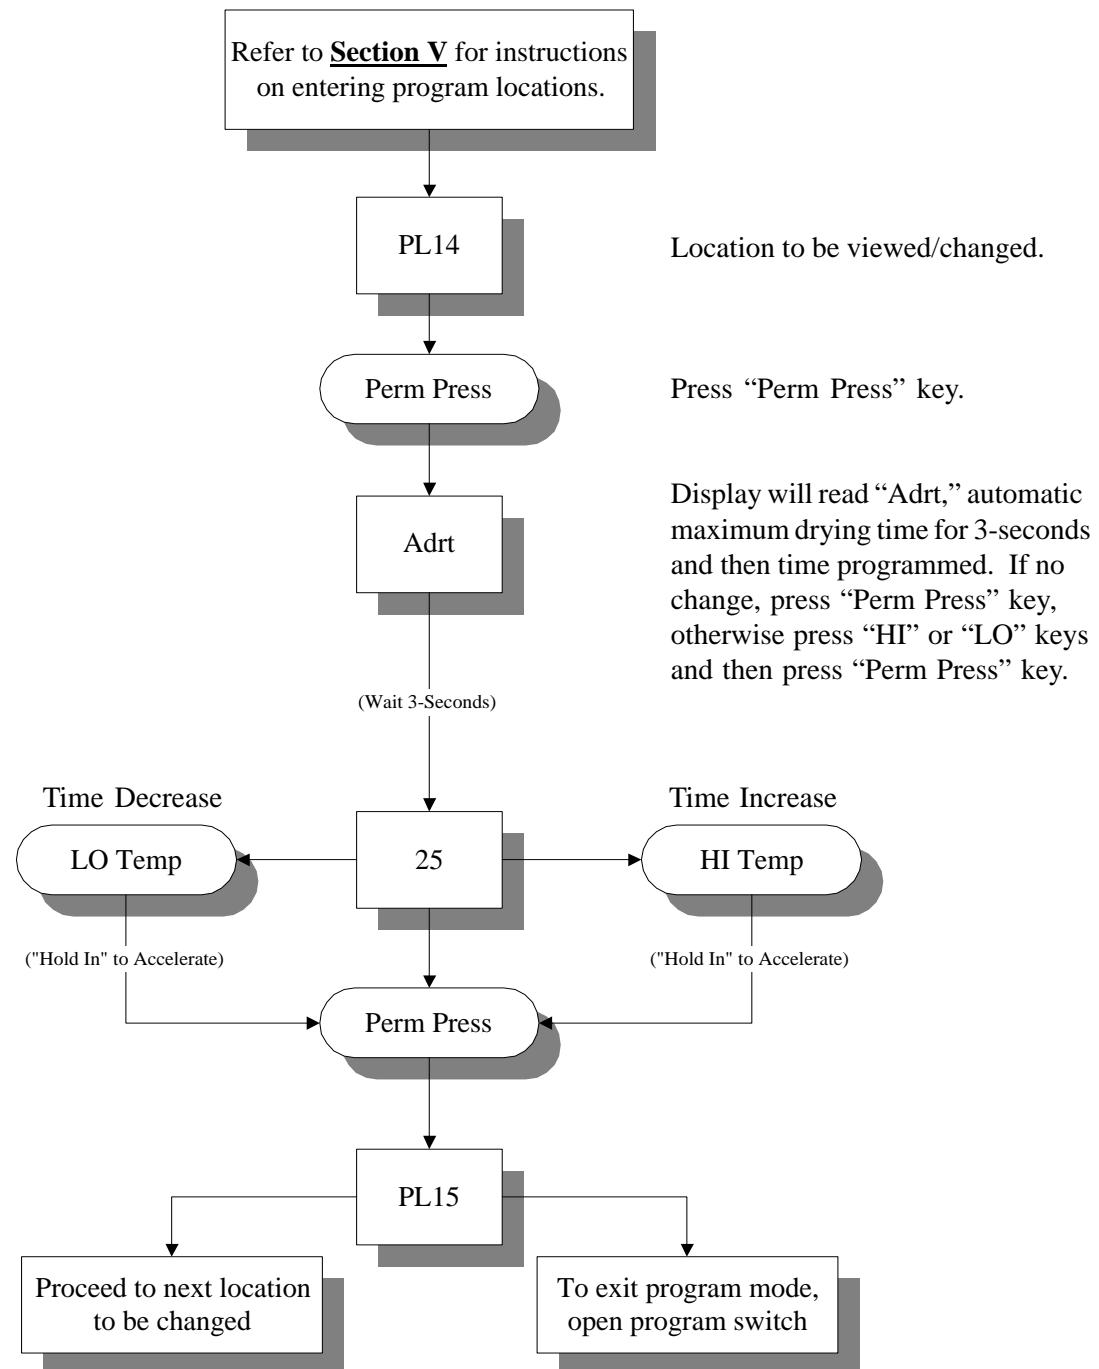

Summary: The maximum auto dryness time is programmable from 1 to 99 minutes.

## R. PROGRAM LOCATION 15 (PL15)


### Anti-Wrinkle Timing

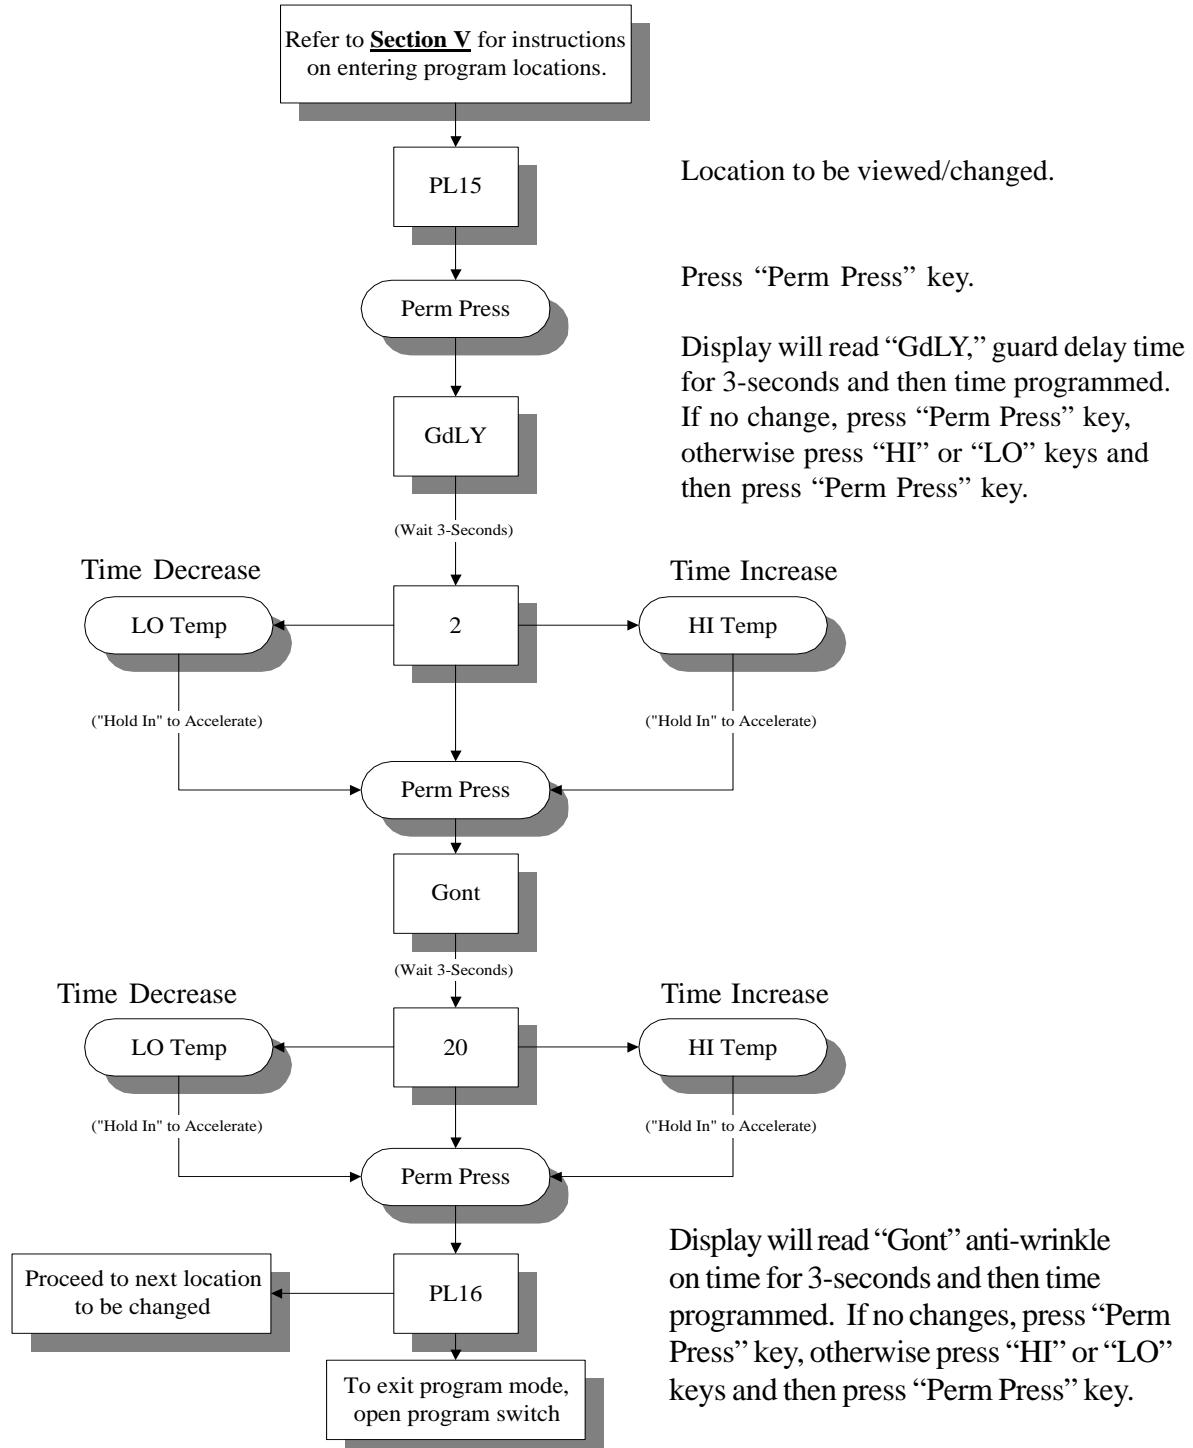

Summary: Guard delay time is programmable from 1 to 9 minutes. Guard on time is programmable from 1 to 99-seconds.

## S. PROGRAM LOCATION 16 (PL16) AND PROGRAM LOCATION 17 (PL17)

Maximum Active Anti-Wrinkle Time

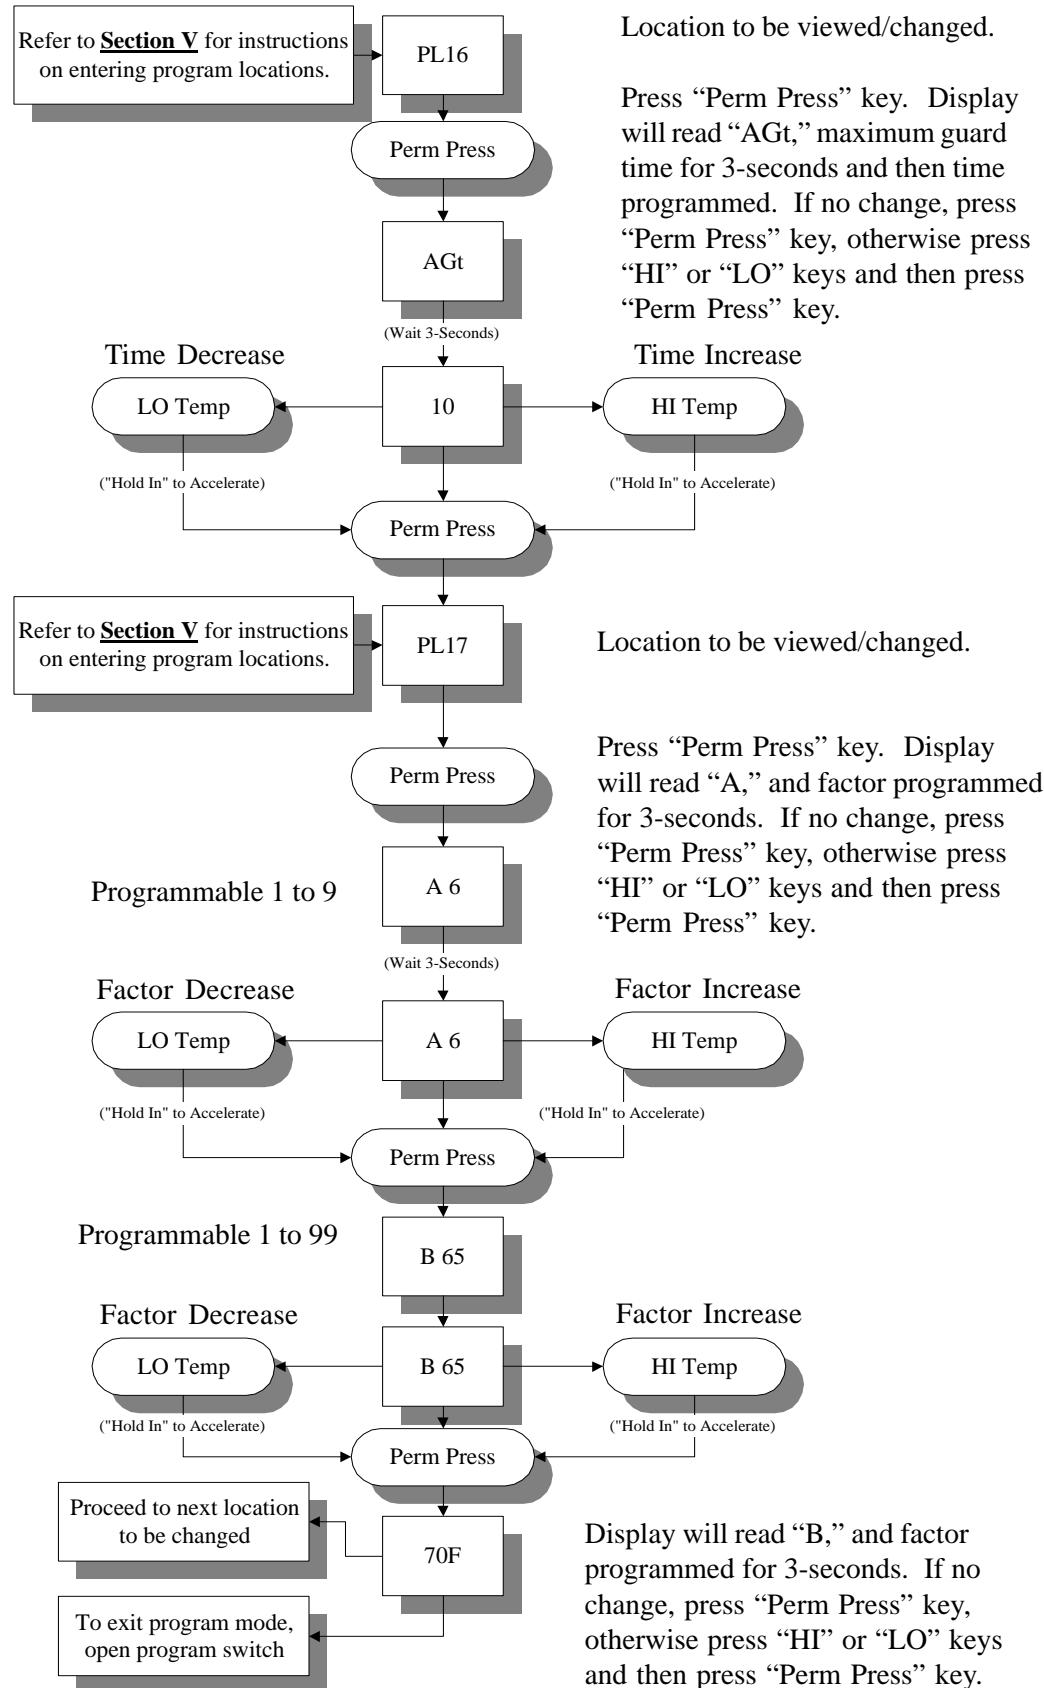

## **SECTION VII**

### FACTORY RESET

### PROGRAMS/PARAMETERS

Unless otherwise specified at the time of ordering, the Phase 5 microprocessor controller (computer) has been preprogrammed by the factory with the following programs/parameters. Should changes be found necessary, please read this **Phase 5 Coin User's Manual** carefully to thoroughly familiarize yourself with the Phase 5 microprocessor controller's programming characteristics.

#### A. SINGLE COIN ONLY

- PL01** - °FAr - Temperatures in Fahrenheit  
tInE - Timed mode  
Grd - Anti-wrinkle guard on  
bUZ - Anti-wrinkle guard buzzer (tone) on  
Coin - Coin(s) required to start  
FLS - Display will flash in intervals between "FILL" and "Amount To Start"  
bCrS - Bad coin reset  
AtIn - Accumulative time  
SEn - Rotational sensor selected (active)
- PL02** - PdrY - Percent Dry - 98%
- PL03** - HI°F - 160°
- PL04** - HICd - Temperature - 80°, Time - 2 minutes
- PL05** - LO°F - 120°
- PL06** - LOCd - Temperature - 80°, Time - 2 minutes
- PL07** - PP°F - 140°
- PL08** - PPCd - Temperature - 80°, Time - 3 minutes
- PL09** - LCdE - Left coin denomination - 25¢
- PL10** - rCdE - Right coin denomination - 10¢
- PL11** - tFAS - Time for amount to start - 10 minutes
- PL12** - AtSt - Amount to Start - 25¢
- PL13** - AFAt - Amount for additional time - 25¢
- PL14** - Adrt - Automatic dry maximum time - 30 minutes
- PL15** - GdLY - Anti-wrinkle guard off delay time - 2 minutes  
Gont - Anti-wrinkle guard on time - 20-seconds
- PL16** - AGt - Active anti-wrinkle guard time - 10 minutes
- PL17** - A and b - "A" is adjustable from 1 to 99 (example: A = 5)  
Factors - "b" is adjustable from 1 to 99 (example: B = 75)

## B. DUAL COIN ONLY

- PL01** - °FAr - Temperatures in Fahrenheit  
tInE - Timed mode  
Grd - Anti-wrinkle guard on  
bUZ - Anti-wrinkle guard buzzer (tone) on  
Coin - Coin(s) required to start  
FLS - Display will flash in intervals between “FILL” and “Amount To Start”  
bCrS - Bad coin reset  
AtIn - Accumulative time  
SEn - Rotational sensor selected (active)
- PL02** - PdrY - Percent Dry - 98%
- PL03** - HI°F - 160°
- PL04** - HICd - Temperature - 80°, Time - 2 minutes
- PL05** - LO°F - 120°
- PL06** - LOCd - Temperature - 80°, Time - 2 minutes
- PL07** - PP°F - 140°
- PL08** - PPCd - Temperature - 80°, Time - 3 minutes
- PL09** - LCdE - Left coin denomination - 25¢
- PL10** - rCdE - Right coin denomination - 10¢
- PL11** - tFAS - Time for amount to start - 10 minutes
- PL12** - AtSt - Amount to start - 25¢
- PL13** - AFAt - Amount for additional time - 25¢
- PL14** - Adrt - Automatic dry maximum time - 30 minutes
- PL15** - GdLY - Anti-wrinkle guard off delay time - 2 minutes  
Gont - Anti-wrinkle guard on time - 20-seconds
- PL16** - AGt - Active anti-wrinkle guard time - 10 minutes
- PL17** - A and b - “A” is adjustable from 1 to 99 (example: A = 5)  
Factors - “b” is adjustable from 1 to 99 (example: B = 70)

## SECTION VIII

### PHASE 5 COIN SYSTEM DIAGNOSTICS

**ALL** major circuits, including door, microprocessor temperature sensor, heat, and motor circuits are monitored. The Phase 5 coin microprocessor controller (computer) will inform the user via the light emitting diode (L.E.D.) display of certain failure codes along with indicators both in the L.E.D. display and at the outputs of each relay (and door switch circuit) to easily identify failures.

#### A. DIAGNOSTIC (L.E.D.) FAILURE CODES


1. “door” - Indicates door switch circuit is open.
  - a. Keyboard (touch pad) entry was made while main door is open  
or
  - b. there is a fault in the door switch circuit (external of the microprocessor controller [computer]).
2. “dSFL” - Indicates a fault in the microprocessor temperature sensor circuit. If a fault is detected in the microprocessor heat sensor circuit, the L.E.D. display will read “dSFL” and the buzzer (tone) will sound for approximately 5-seconds every 30-seconds until...
  - a. the problem is corrected  
or
  - b. power to dryer is discontinued...and the problem is then corrected.

**IMPORTANT:** The Phase 5 coin microprocessor controller (computer) has its own internal heat sensing circuit fuse protection located on the back side of the microprocessor controller (computer). If a “dSFL” condition occurs, check to see if this fuse has blown. If it has, **DO NOT** replace the entire microprocessor controller (computer); replace only the fuse and do so only with a 1/8-Amp (Slo-Blo) type fuse.

**NOTE:** Once the Phase 5 coin microprocessor controller (computer) detects a problem in the heat circuit, it updates every 30-seconds so if a problem was a loose connection in this circuit, which corrected itself, the “dSFL” condition would automatically be cancelled.

3. "SEFL"- Indicates rotational sensor circuit failure meaning that there is a fault somewhere in the basket (tumbler) rotation detection circuit. Microprocessor controller (computer) has detected that for whatever the reason or failure, the basket (tumbler) is not turning.
  
4. "Hot" - Indicates a possible overheating condition. The Phase 5 microprocessor controller (computer) monitors the temperature in the dryer at ALL times. If the controller (computer) detects that the temperature in the dryer has exceeded 180° F (82° C) it will disable ALL outputs (shut the dryer down), the tone (buzzer) will sound for approximately 5-seconds, and the display will read "Hot." The light emitting diode (L.E.D.) display will continue to read "Hot" until the temperature sensed has dropped to 180° F (82° C) or lower and the microprocessor controller (computer) is manually reset by closing and opening the Program Switch (PS).


## B. L.E.D. DISPLAY INDICATORS/DOTS

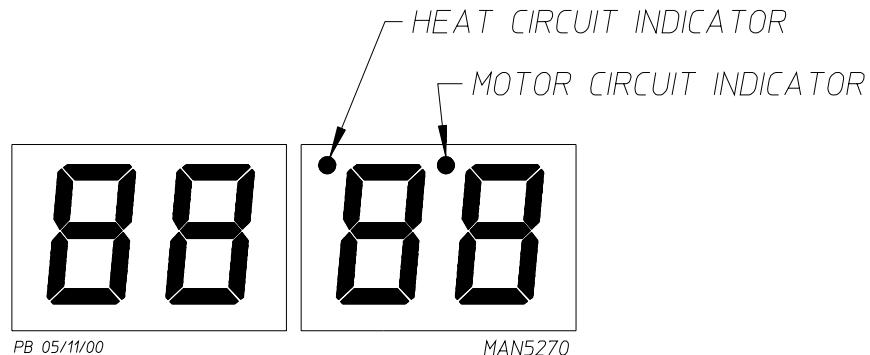

The L.E.D. indicator dots located at the top portion of the display indicates the various microprocessor controller (computer) output functions while a cycle is in progress. These dots **DO NOT** necessarily mean that the outputs are functioning. They are only indicating that the function (output) **should be** active (on).

1. Heat Circuit Indicator - indicator dot is on whenever the microprocessor controller (computer) is calling for the heating circuit to be active (on).
  
2. Motor Circuit Indicator - indicator dot is on whenever a cycle is in progress.

## C. PHASE 5 MICROPROCESSOR CONTROLLER (COMPUTER) RELAY OUTPUT L.E.D. INDICATORS

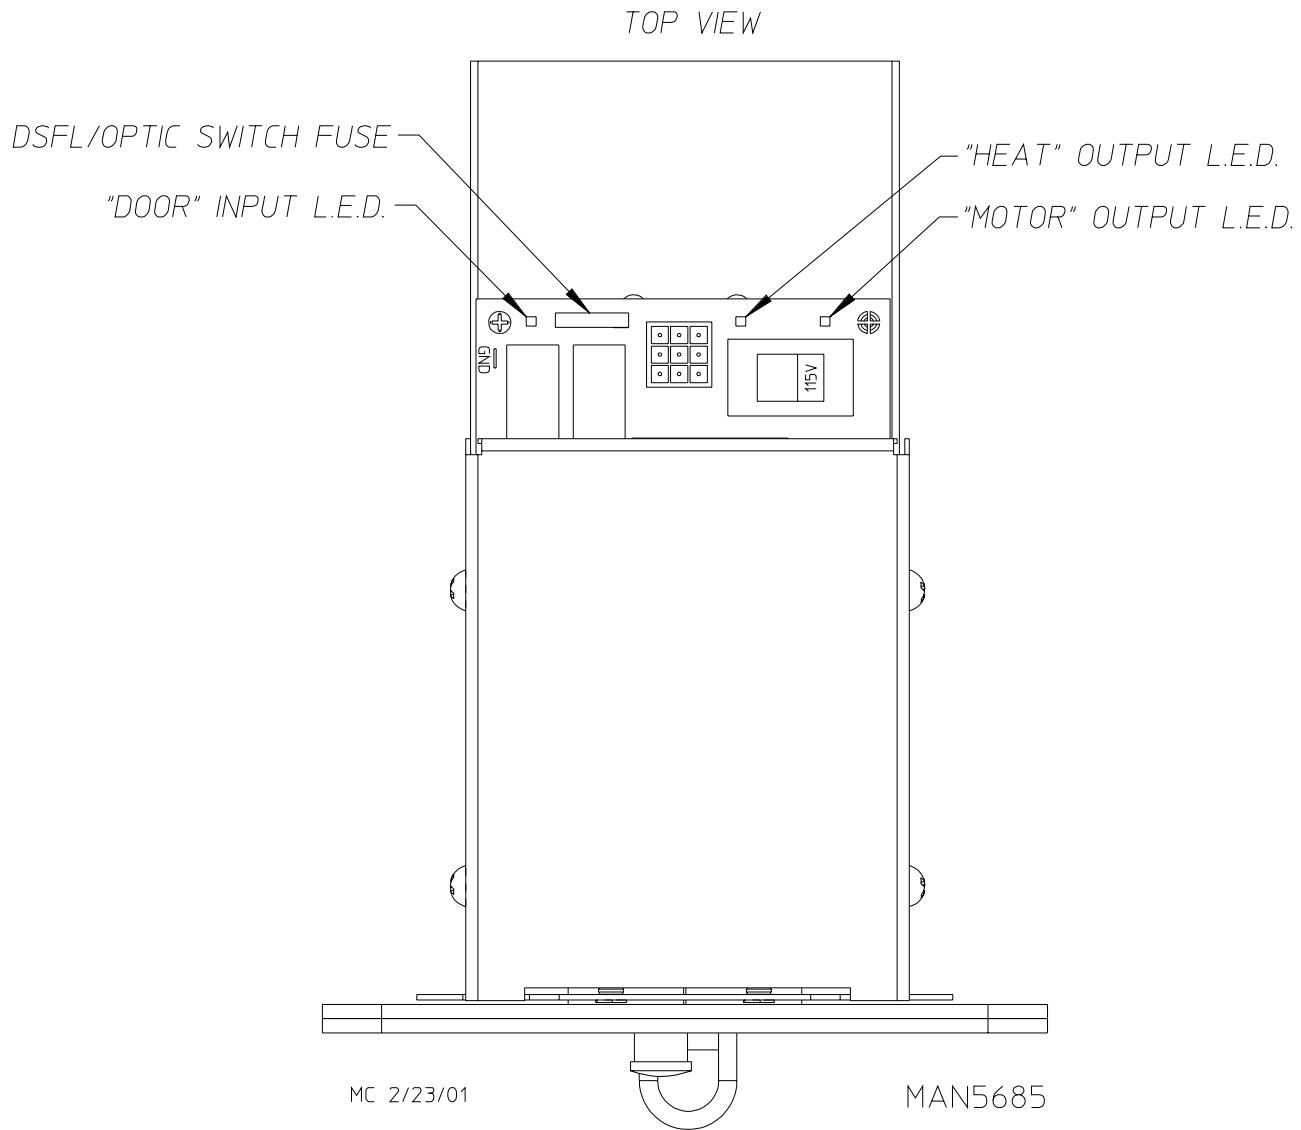

There are three (3) light emitting diode (L.E.D.) indicators ("red" lights) located on the top of the microprocessor controller (computer), which are identified/labeled as "DOOR," "HEAT," and "MTR" (motor). These L.E.D.s indicate that the outputs of the microprocessor controller (computer), or in the case of the door switch, the inputs are functioning.

1. "DOOR" -L.E.D. **SHOULD BE ON ALL THE TIME** (even if the dryer is not running) unless the main door is open or there is a problem (open circuit) in the main door switch circuit.

**NOTE:** If the dryer is started (the display L.E.D. indicator dots are on) and there are no outputs ("HEAT" and/or "MTR" output L.E.D. are off) and the "DOOR" input L.E.D. is on, the fault is in the Phase 5 microprocessor controller (computer) itself.

**NOTE:** If the failure was elsewhere (i.e. dryer's door switch circuit) the light emitting diode (L.E.D.) display would read "door" if a keyboard (touch pad) entry was attempted. If the display L.E.D. indicators are on, and the door L.E.D. input and motor/heat output L.E.D.s are on and yet the motor and/or heat **is not** active (on); then the problem **is not** the door switch circuit or the Phase 5 microprocessor controller (computer), the problem is elsewhere in the dryer.

2. "HEAT" - Output L.E.D. Indicator - if the dryer is started and there is no heat, yet the microprocessor controller (computer) L.E.D. display heat indicator dot is on, but the heat output L.E.D. indicator is off, then the fault is in the Phase 5 microprocessor controller (computer) itself. If both the display heat output L.E.D. indicators are on, then the problem is elsewhere (external of the microprocessor controller [computer]).
3. "MTR" (motor) - Output L.E.D. Indicator - if the dryer is started and the motor **is not** operating, yet both the microprocessor controller (computer) L.E.D. display motor indicator dot and "DOOR" input L.E.D. indicator are on, but the "MTR" output L.E.D. indicator is off; then the fault is in the Phase 5 microprocessor controller (computer) itself. If the motor **is not** operating and the "MTR" output indicator is on, then the problem is elsewhere (external of the microprocessor controller [computer]).

**ADC113157**

**1** - 03/01/01-250  
**4** \* 10/04/02-250

**2** - 10/19/01-250  
**5** \* 04/07/03-100

**3** - 04/03/02-250

